


# I n s t r u k c j a M o n t a ż u



GRUPA BLACHOTRAPEZ



## BLIZZARD



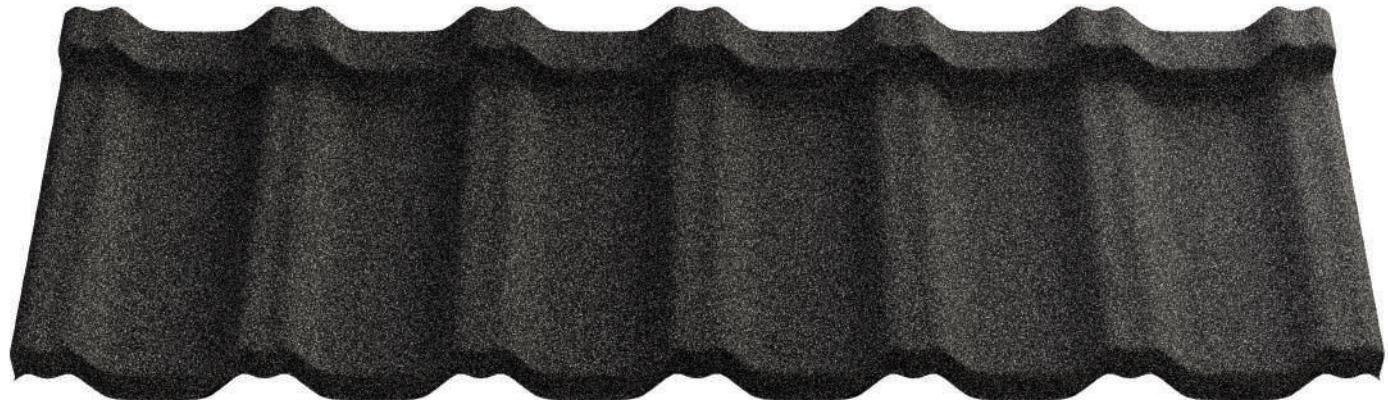


## :mis-tral



















BLIZZARD

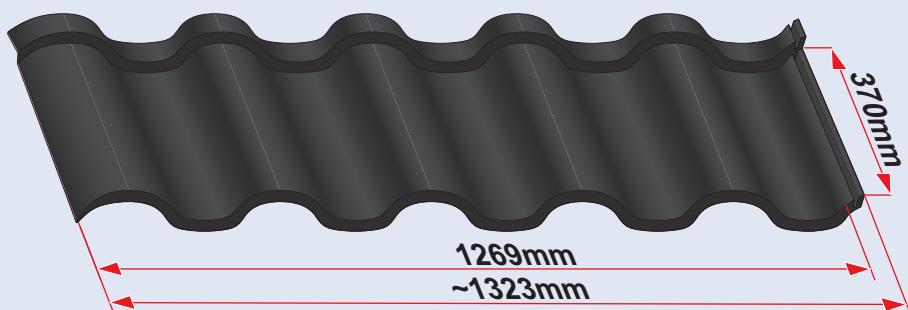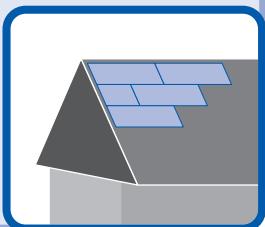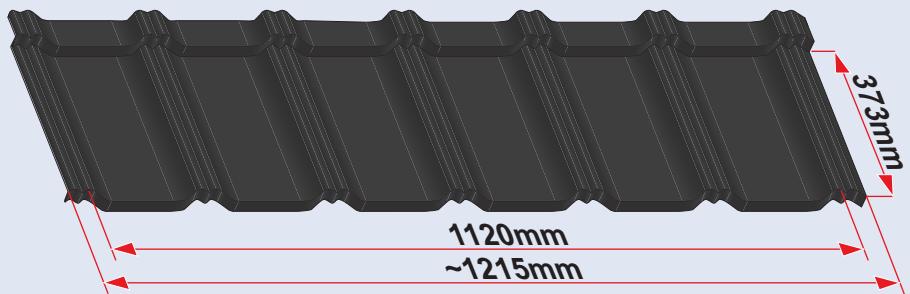

mistral

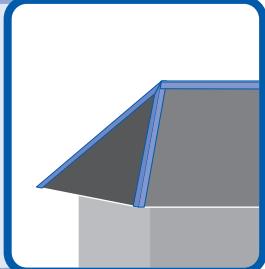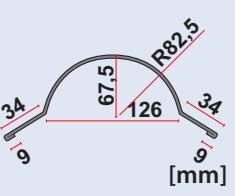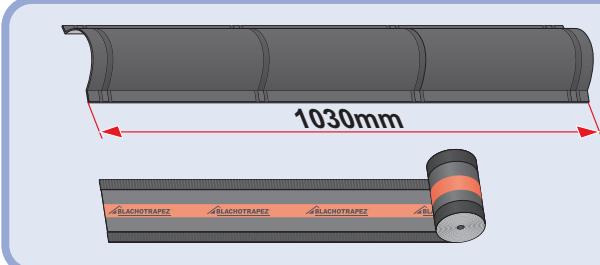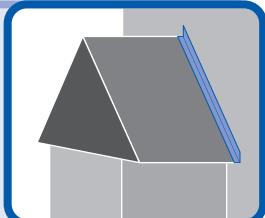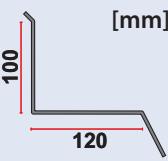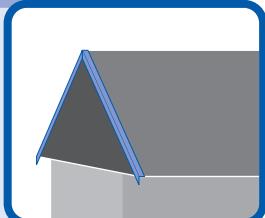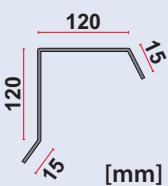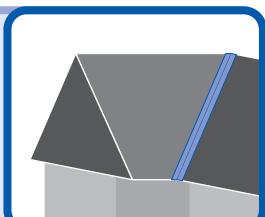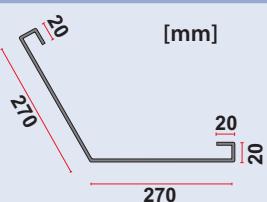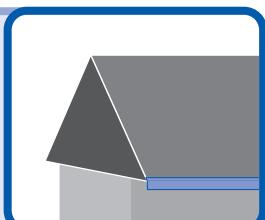
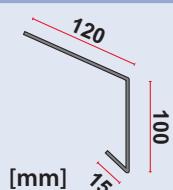
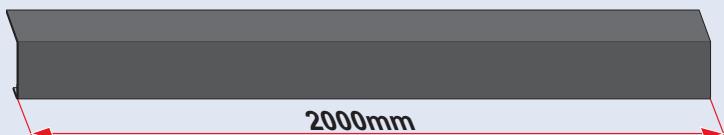
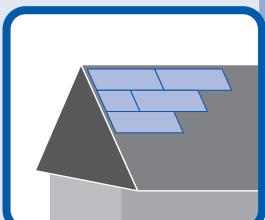


1




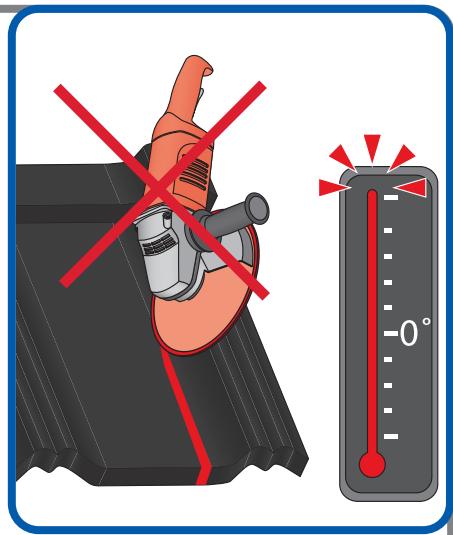


Nie zaleca się montażu w temperaturze poniżej 5°C. Nie należy montować, wyginać ani chodzić po arkuszach, gdy są zawilgocone. Powłoki paneli oraz akcesoriów BTR SYSTEMS są bardziej narażone na pęknięcia podczas pracy w niskich temperaturach otoczenia. Dlatego też wszelkie prace związane z cięciem i wyginaniem najlepiej wykonywać z produktów składowanych w suchym i ciepłym miejscu.





2

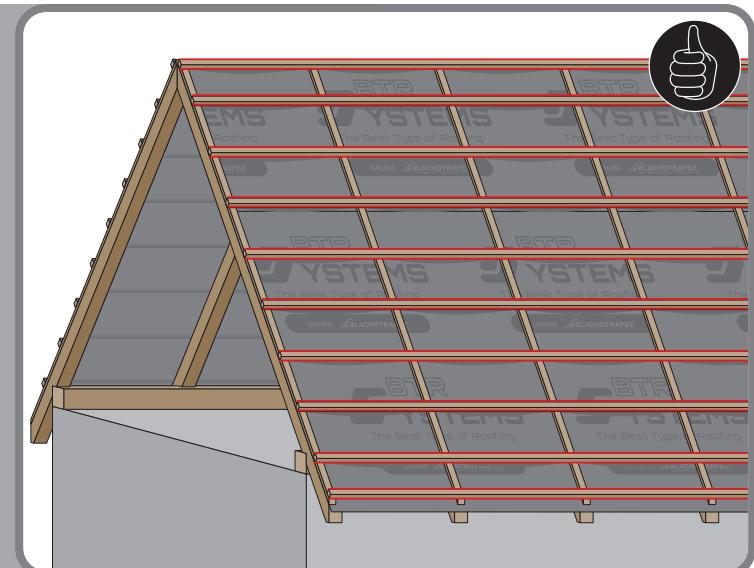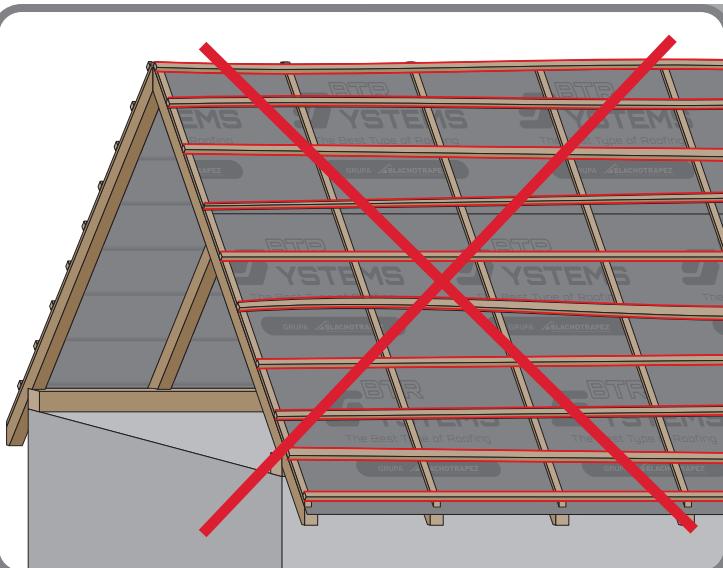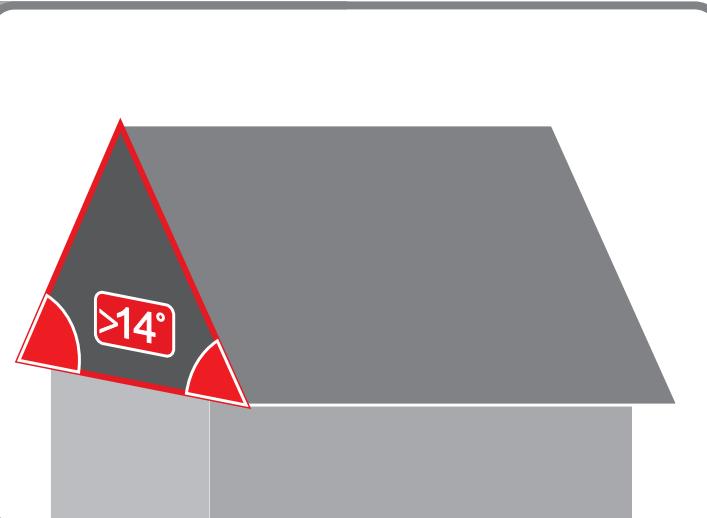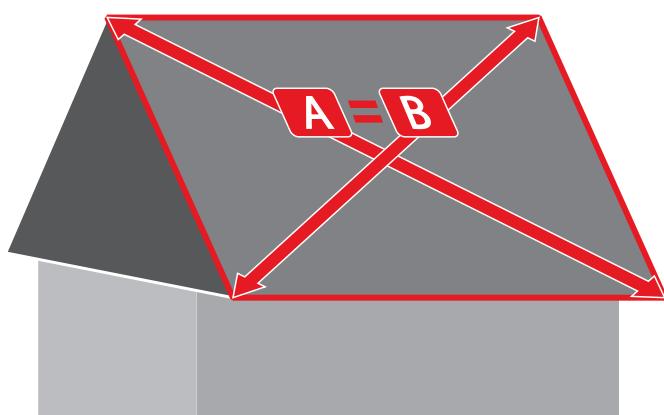




3

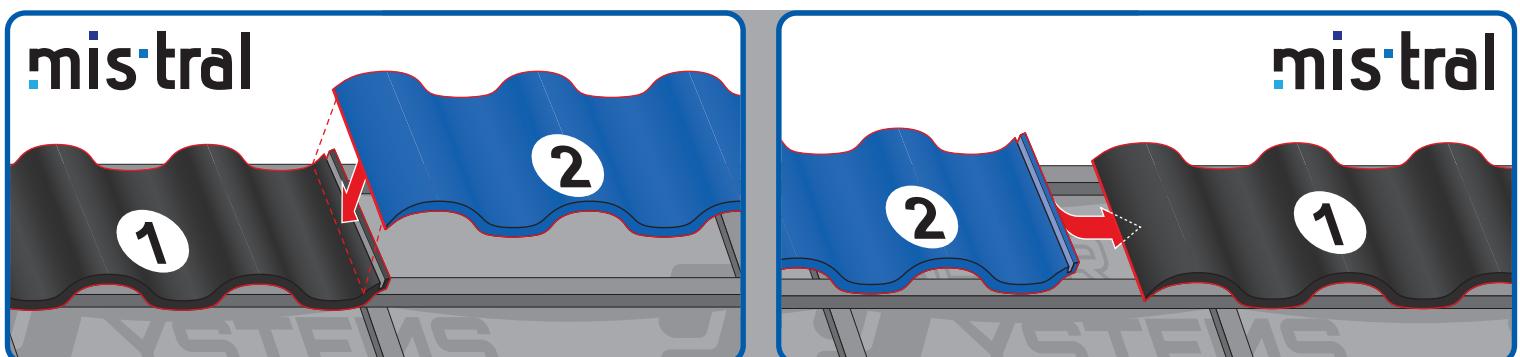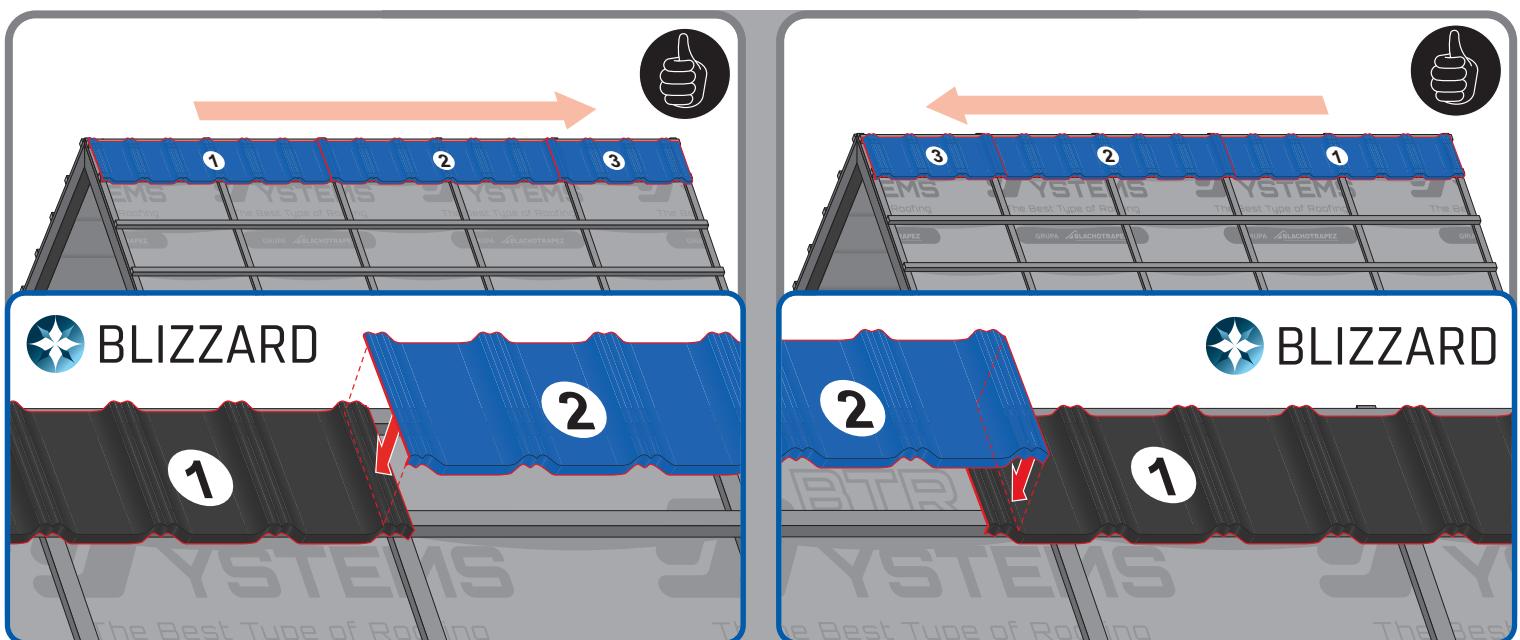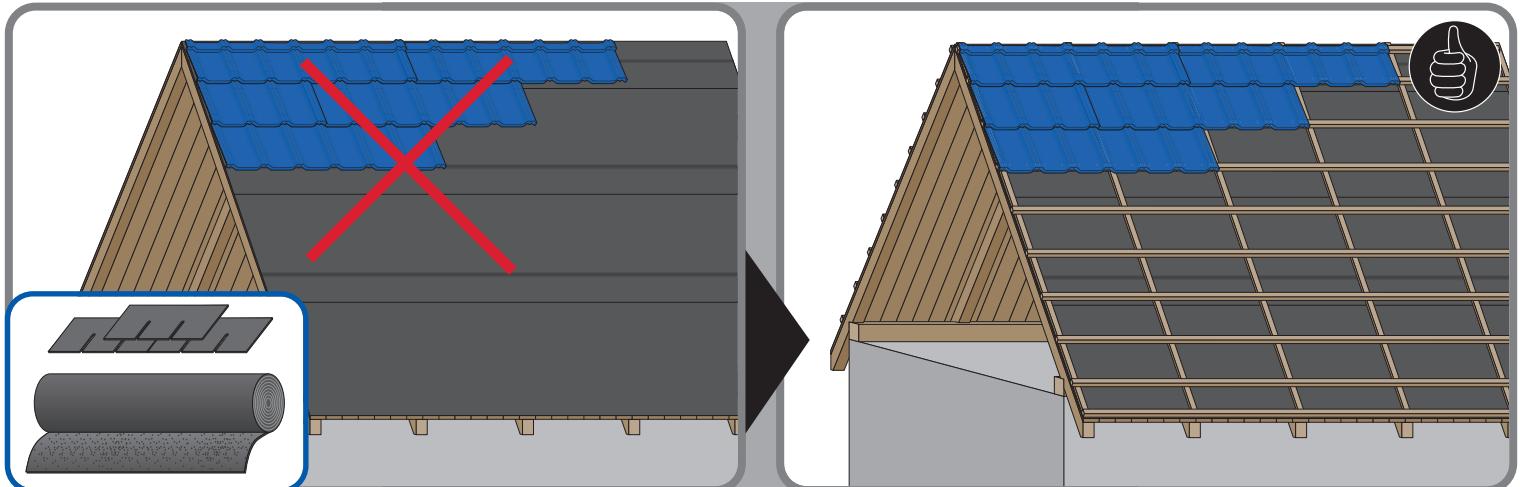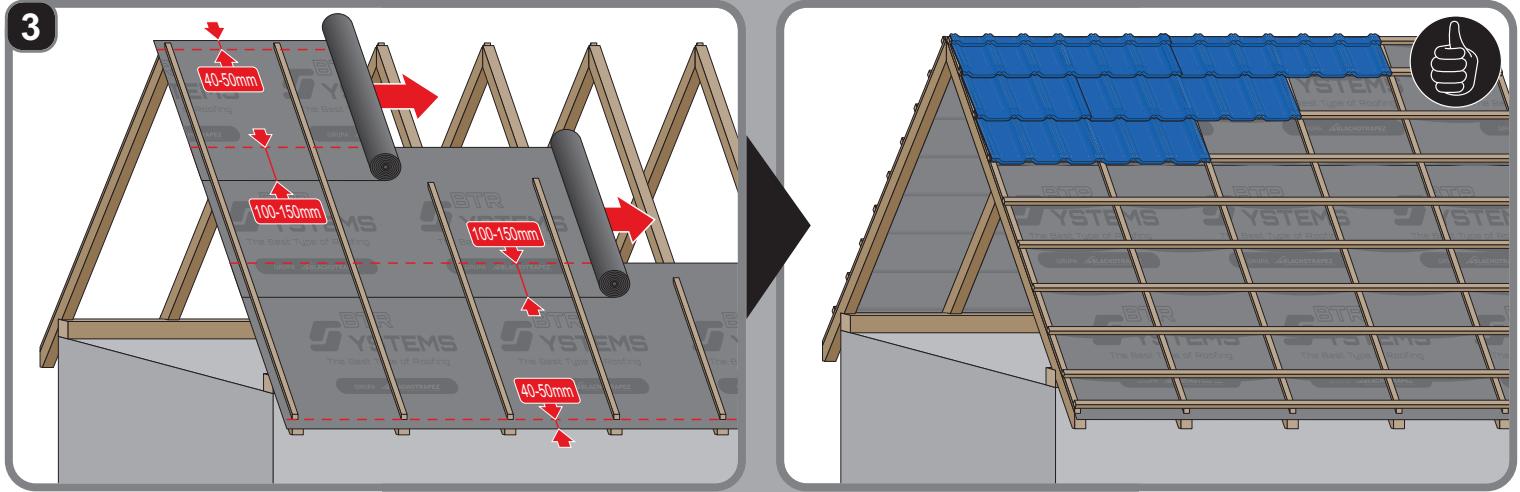



4

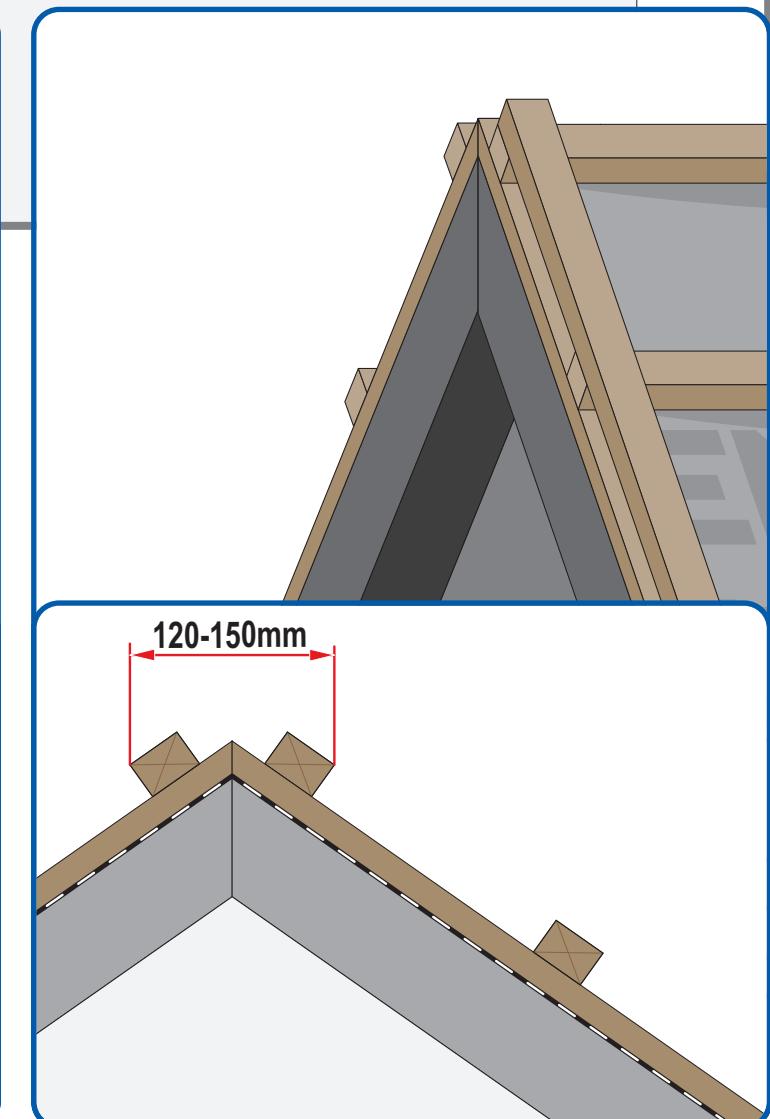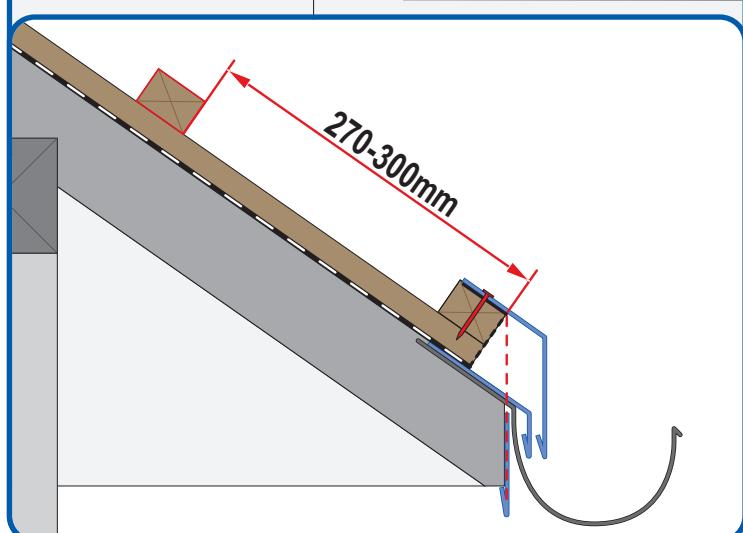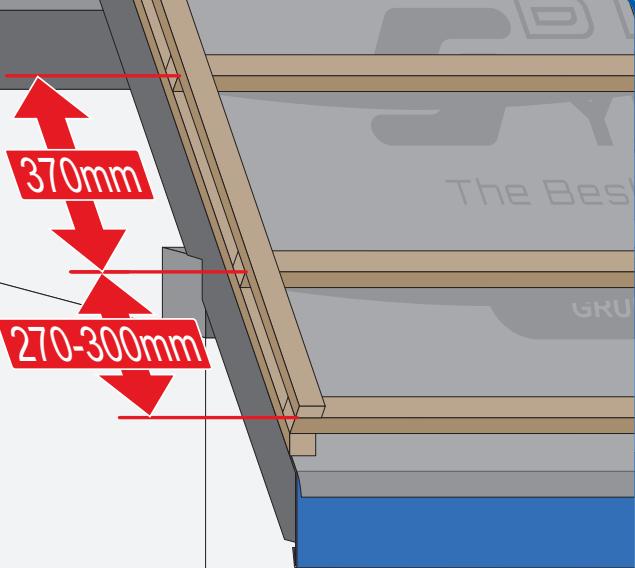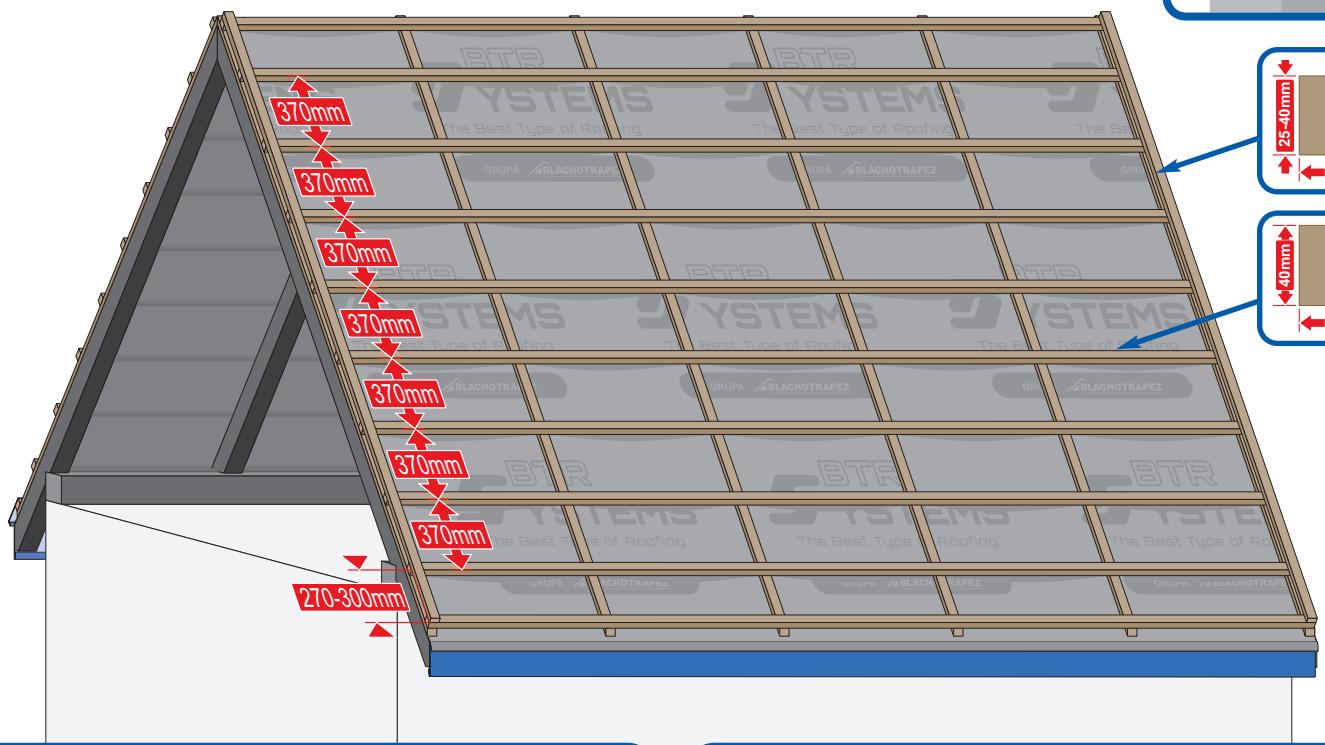



5a

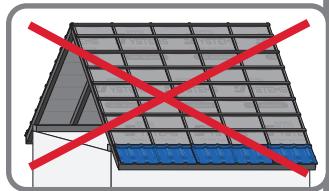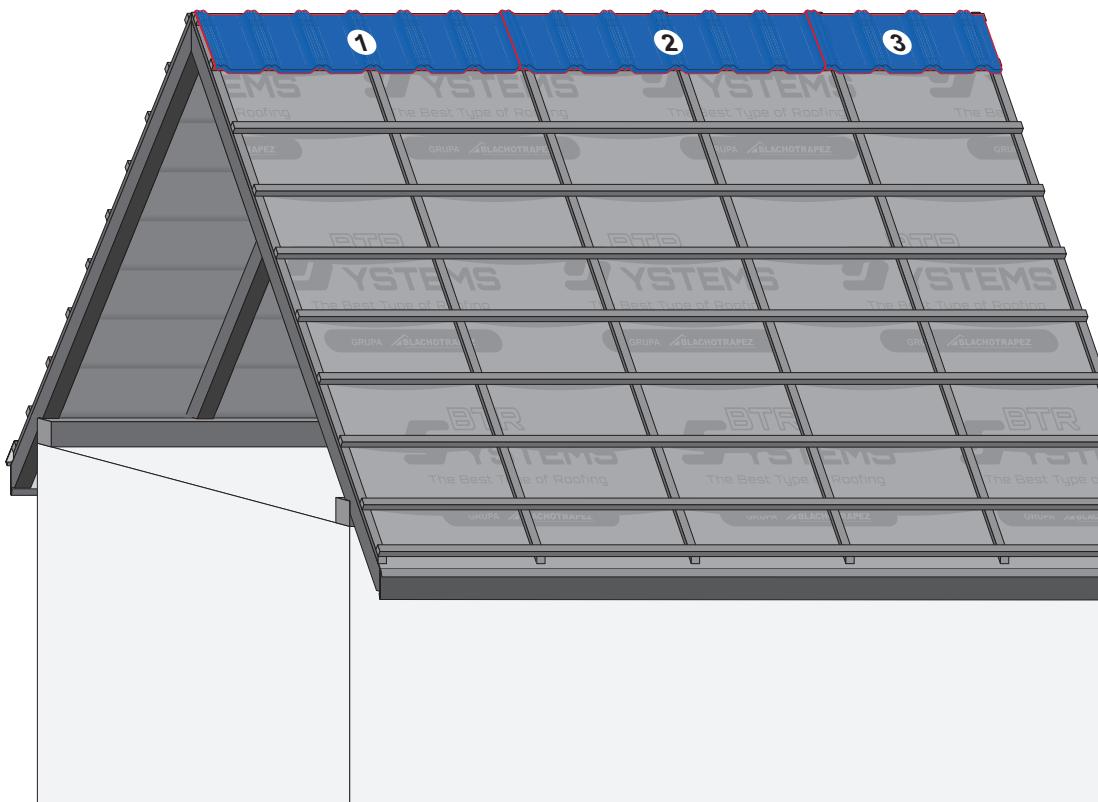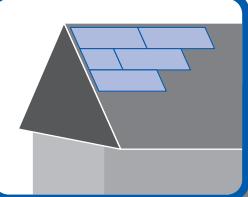



1

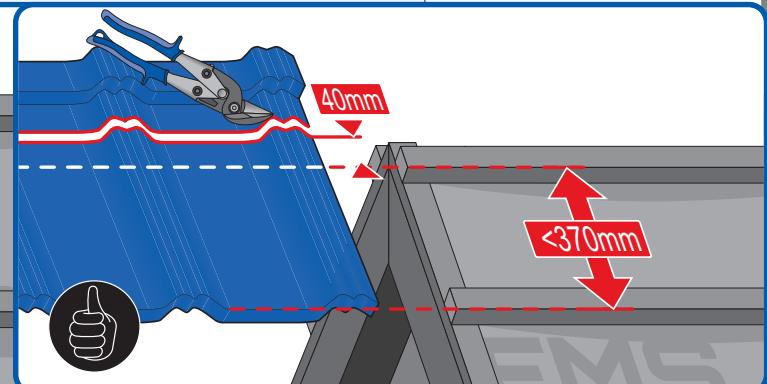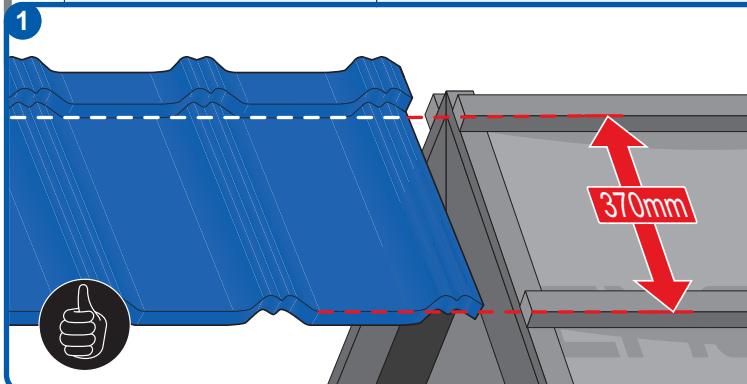



2

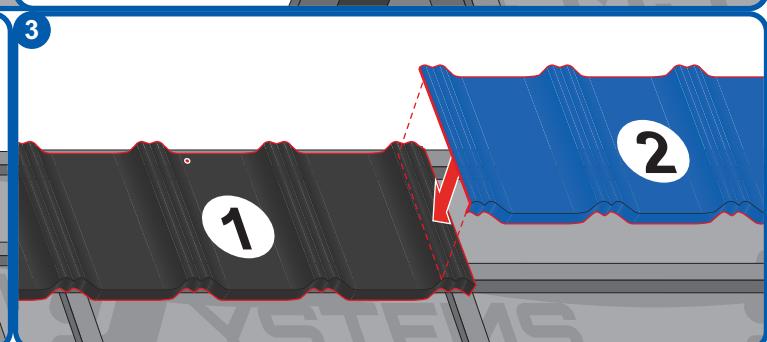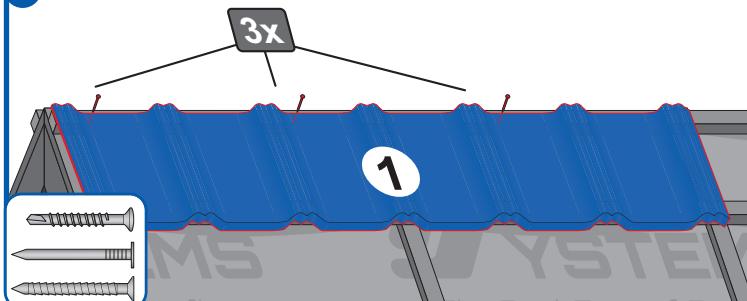


4

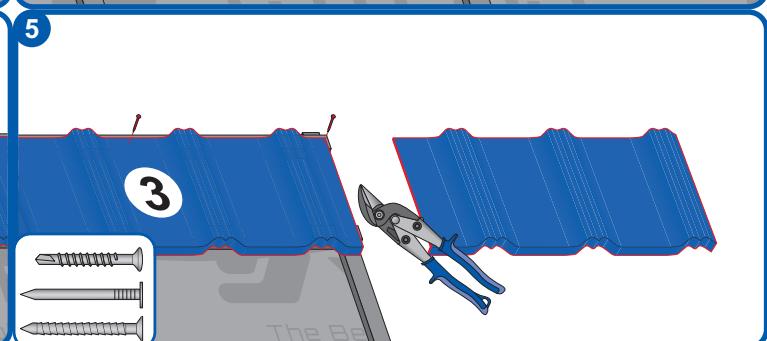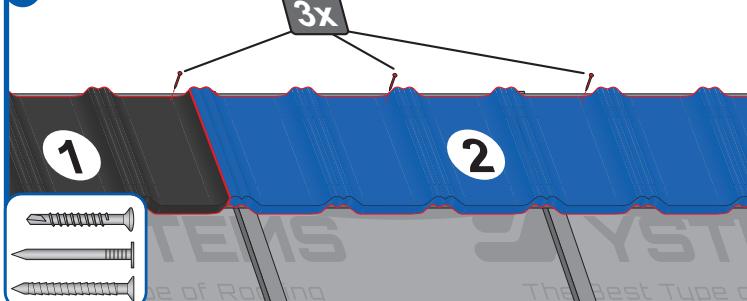


5b

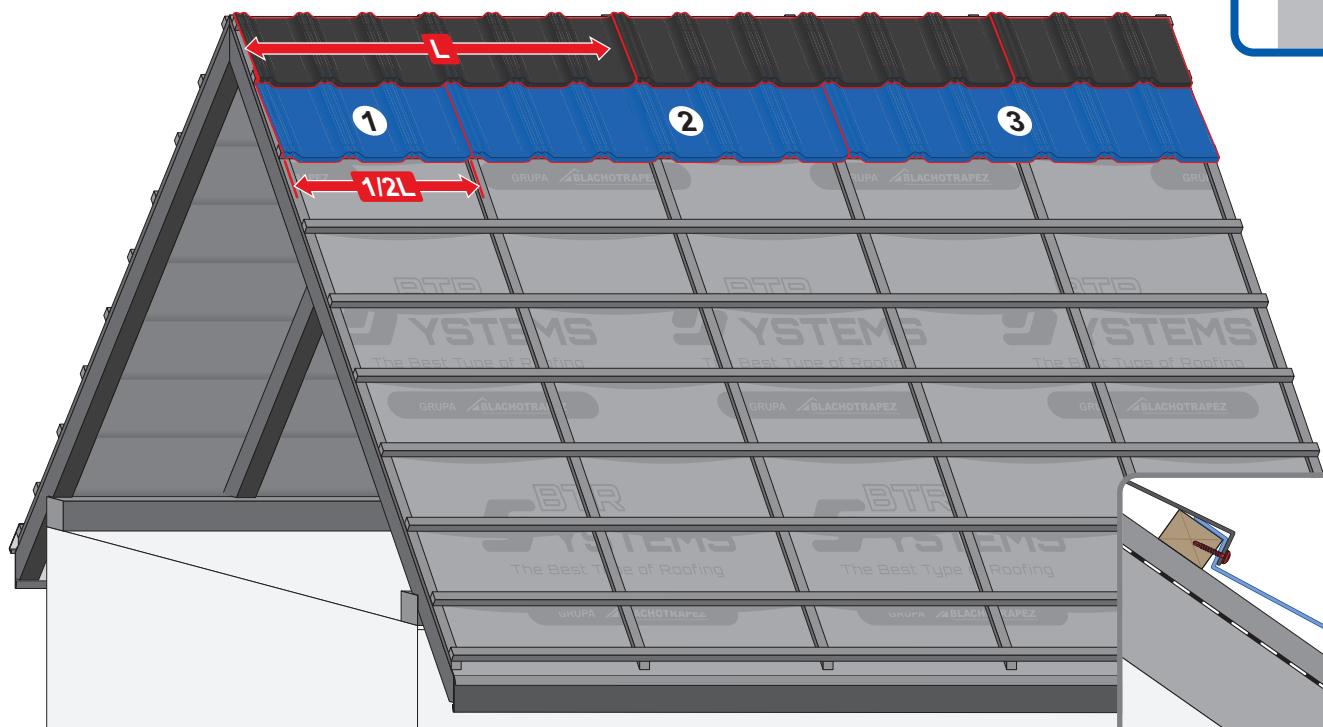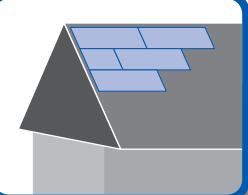


1

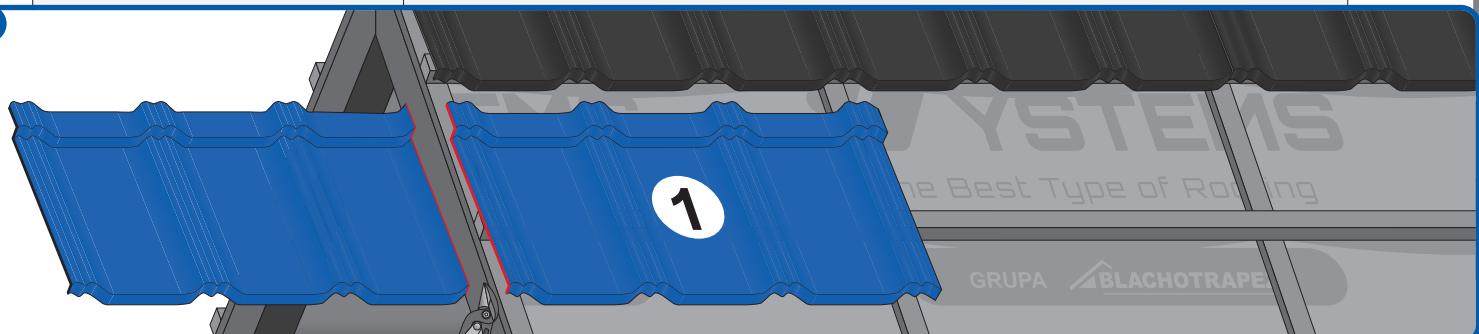





2


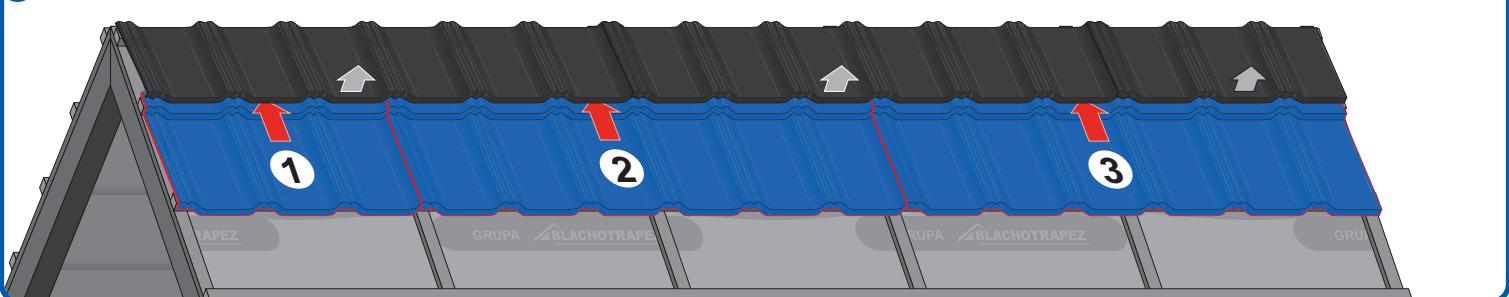


3


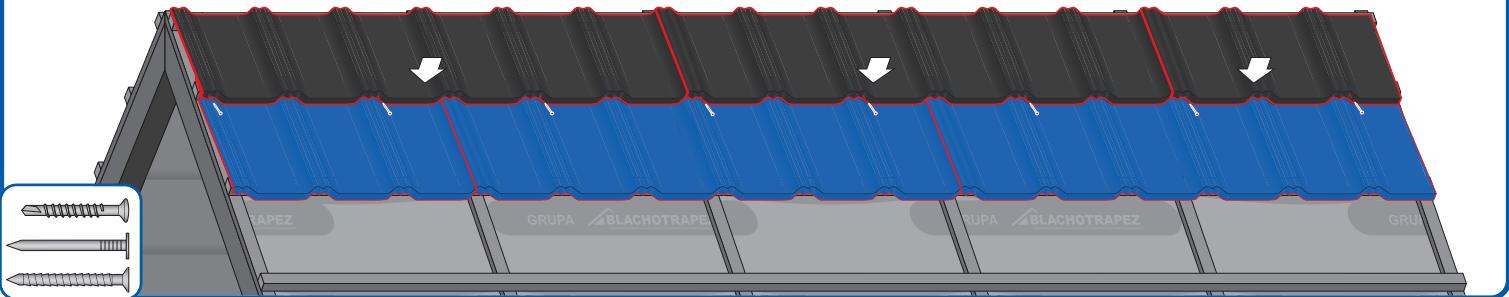


5c

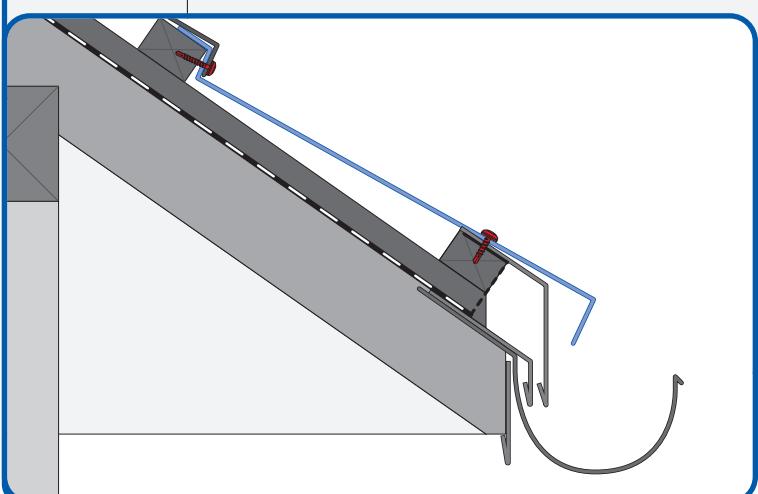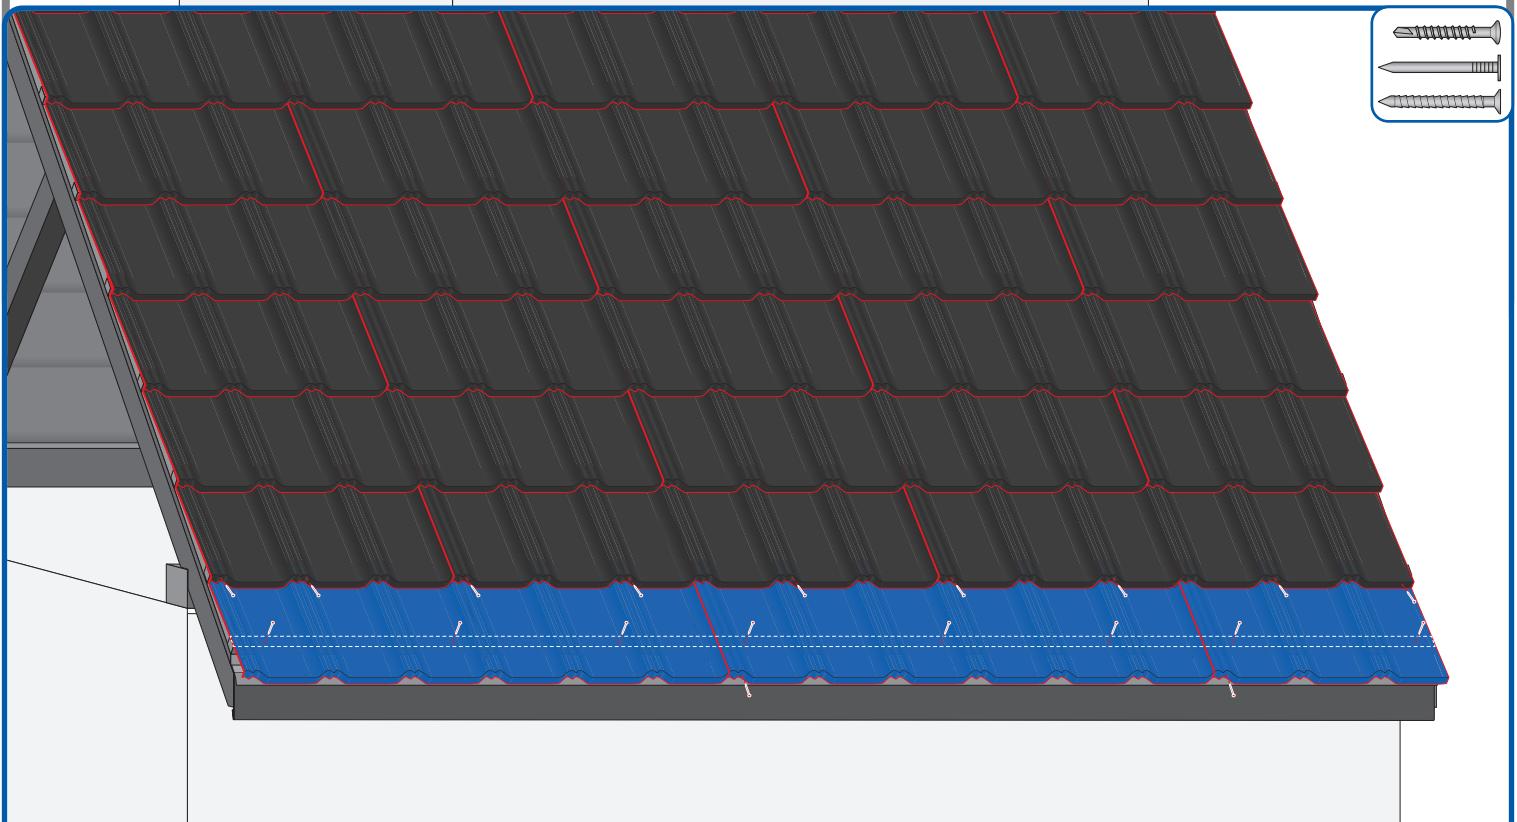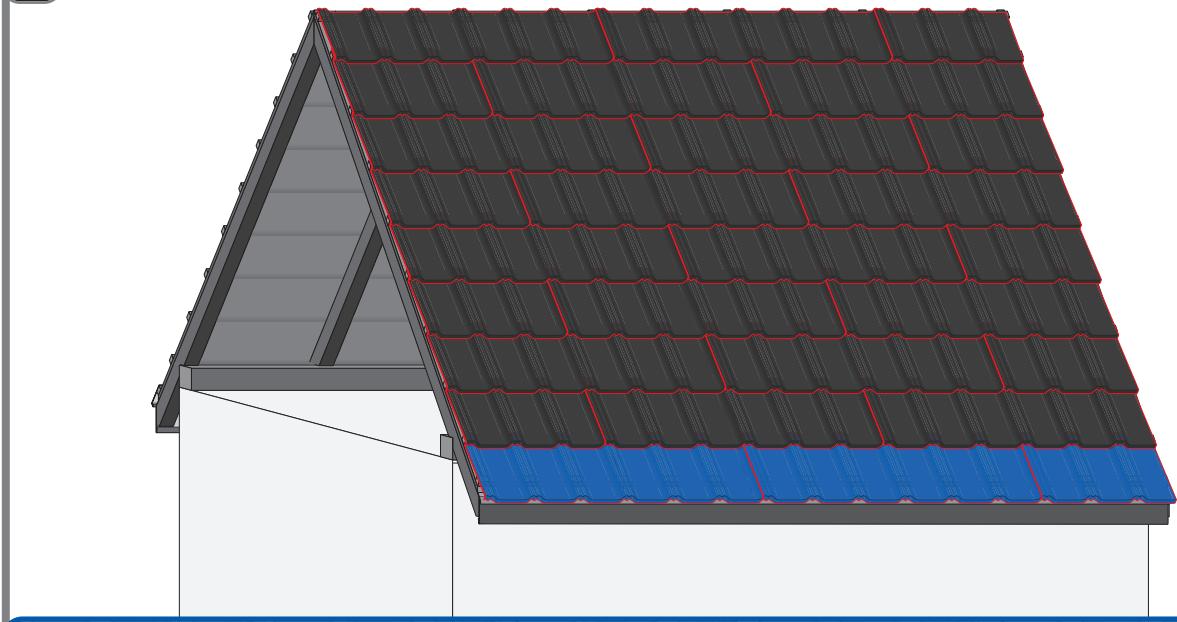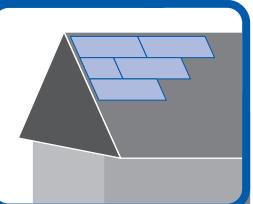

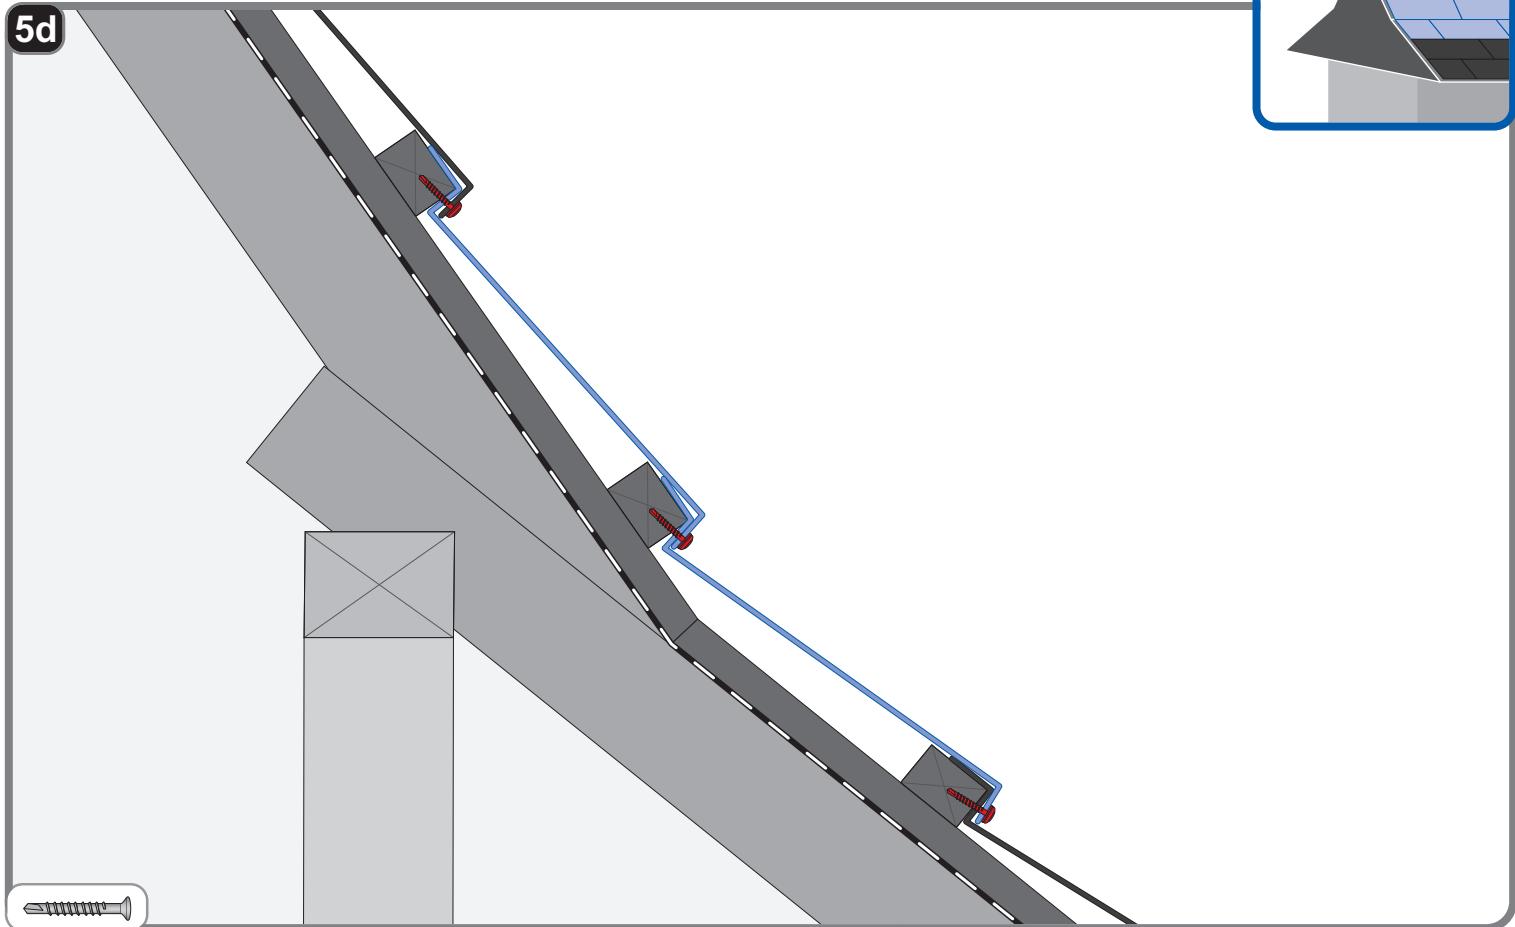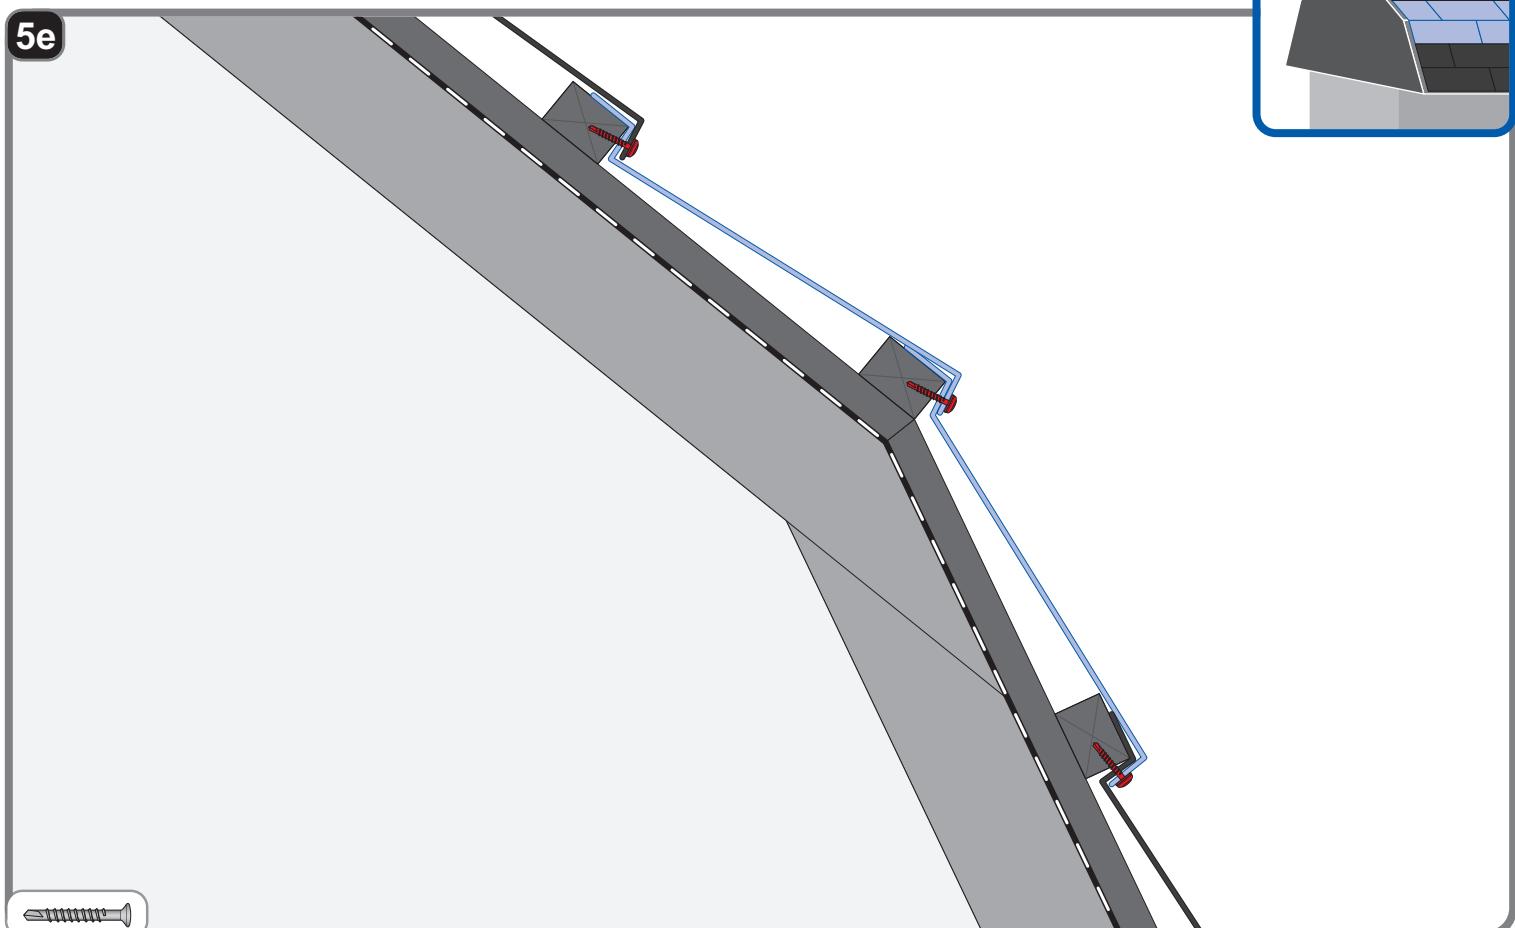**5d****5e**


6a

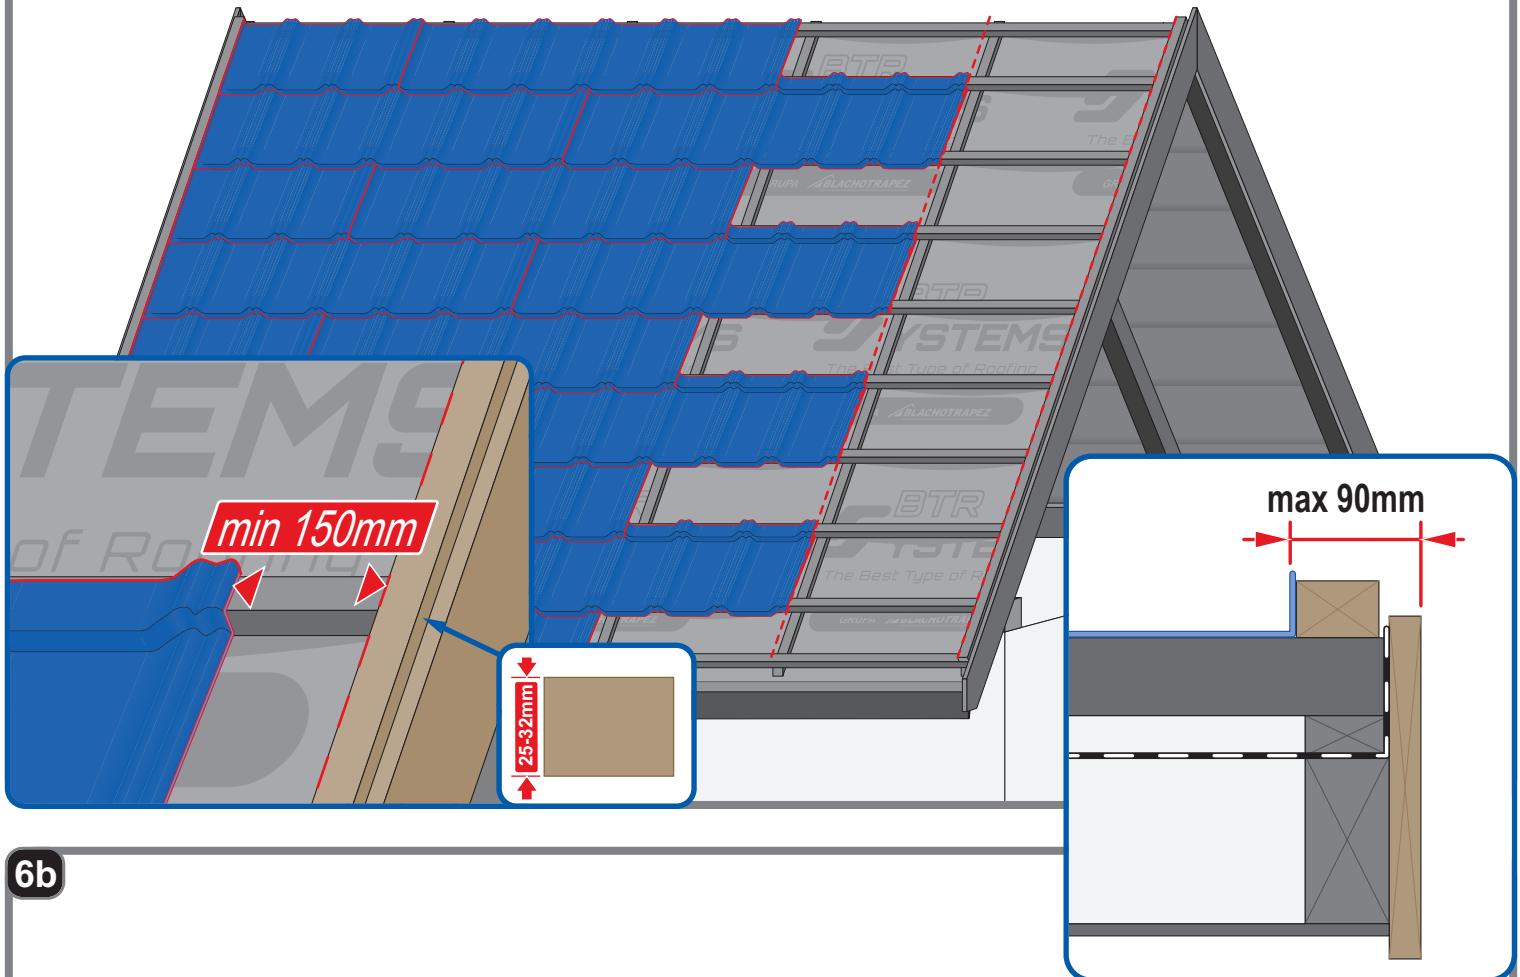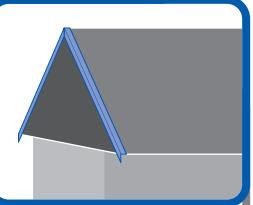


6b






6c

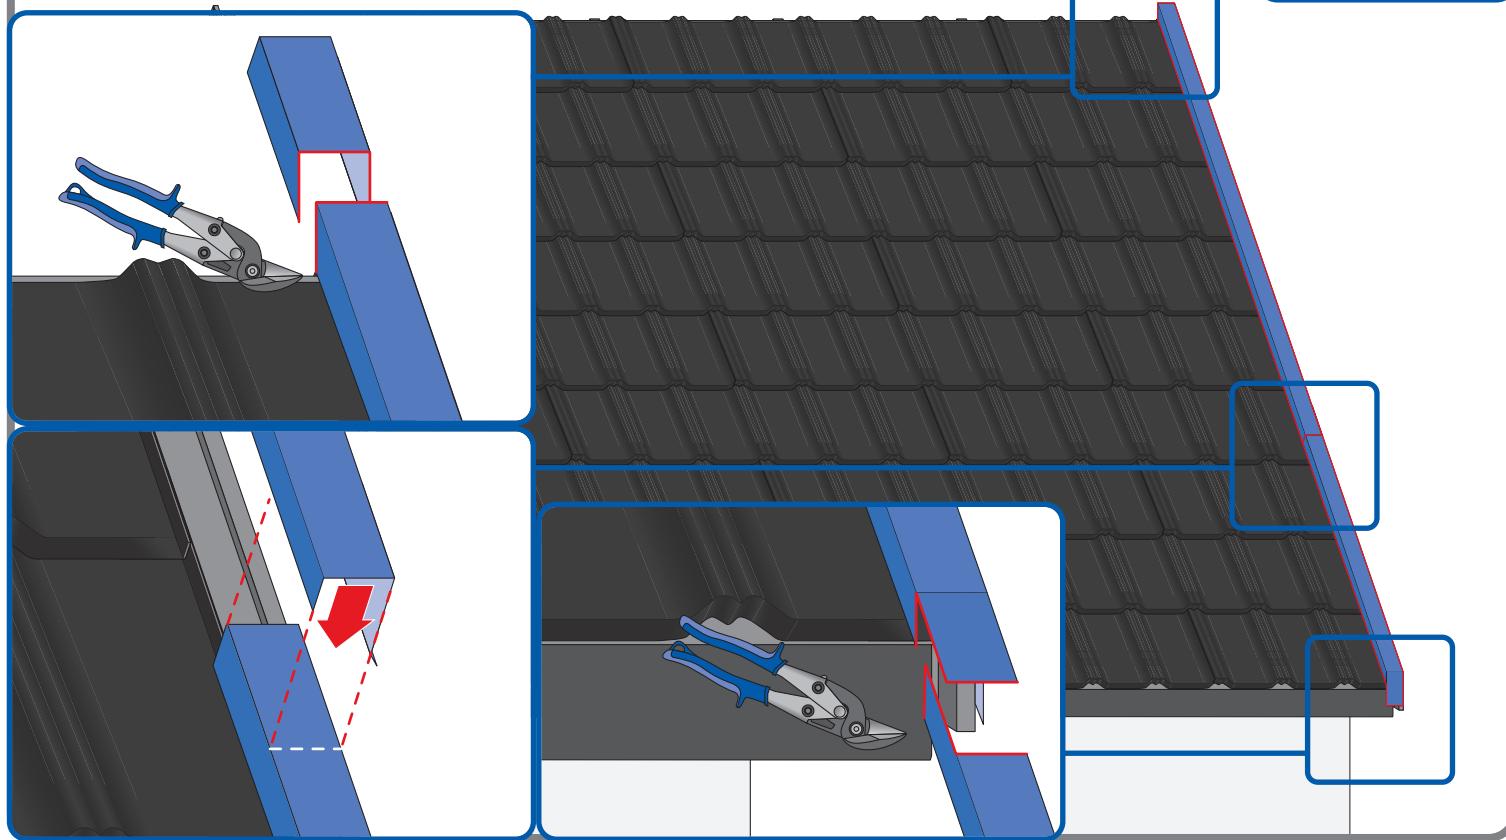




6d

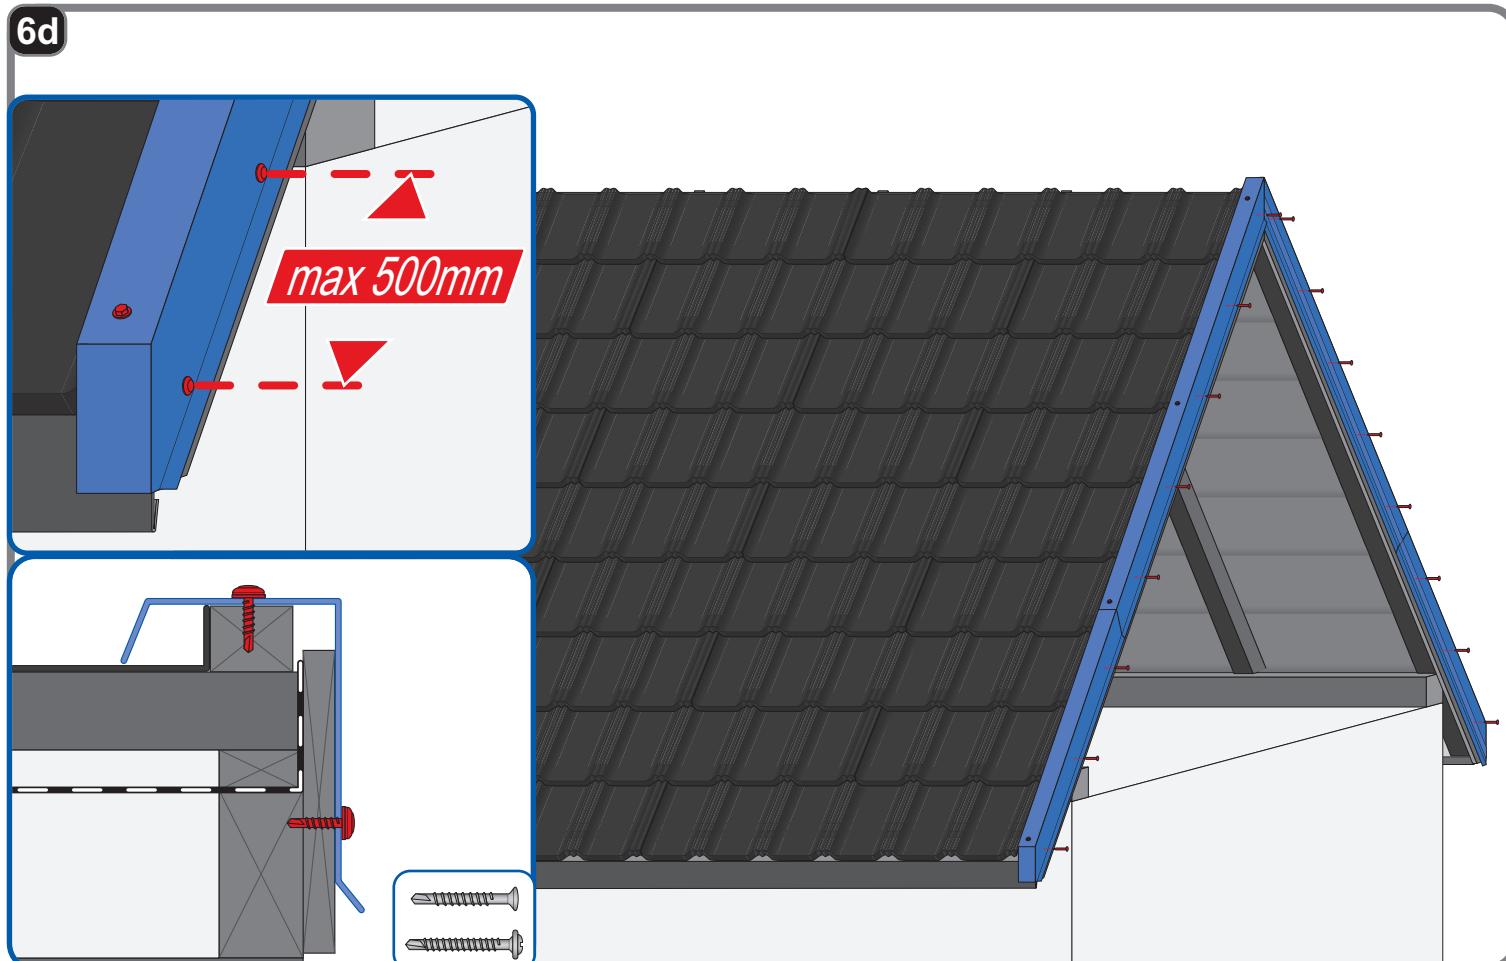

7a

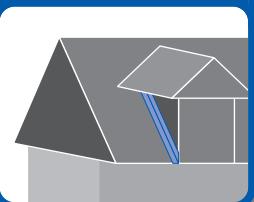
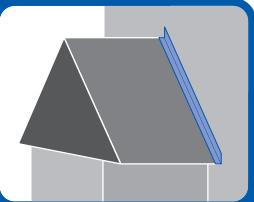
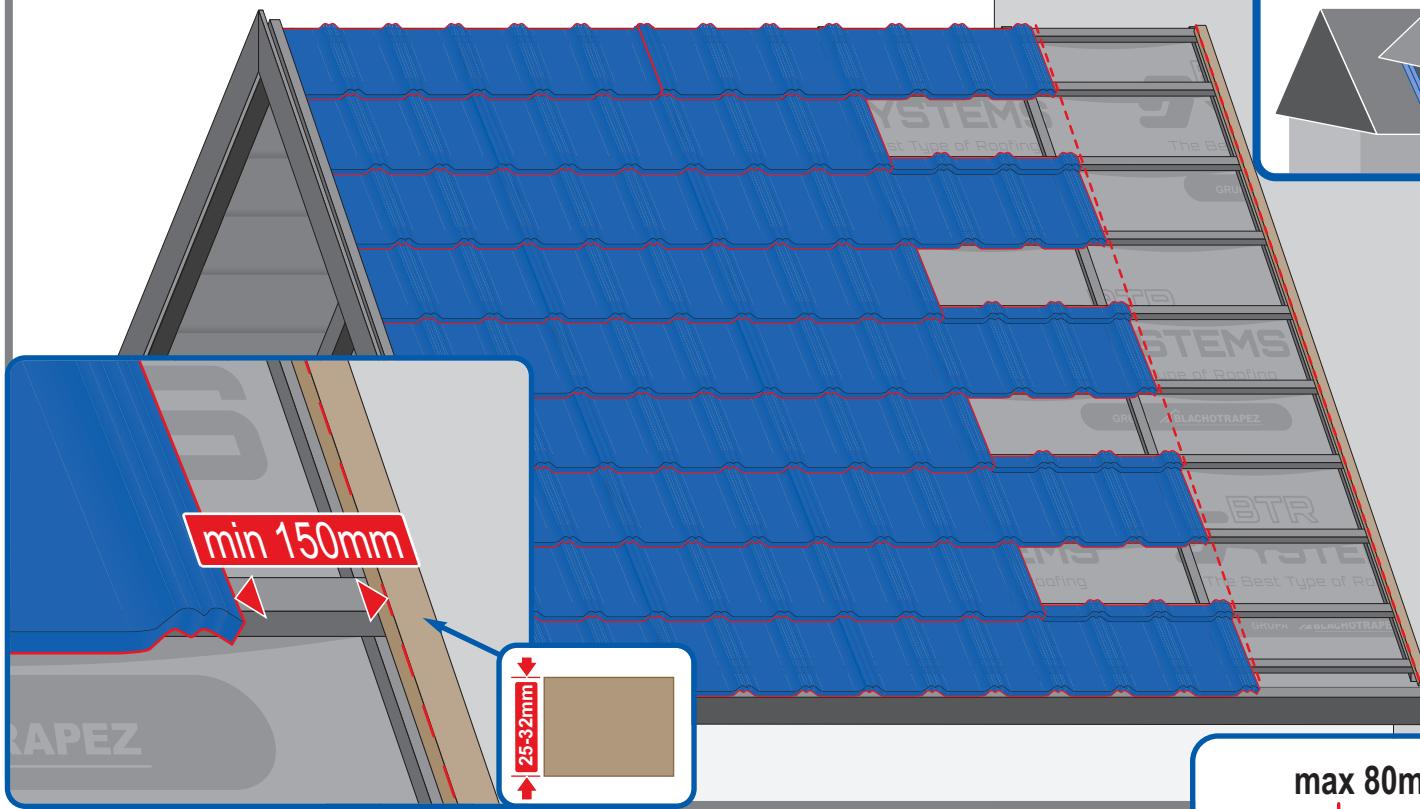


7b

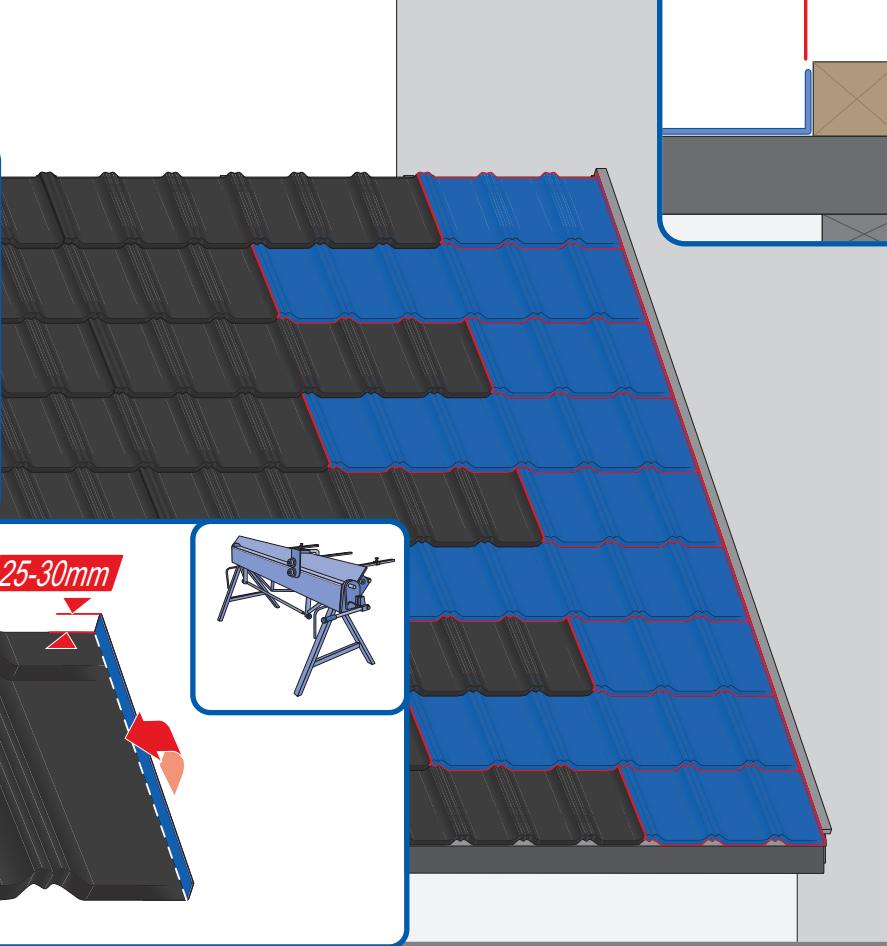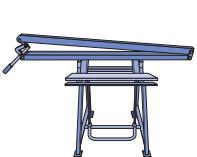
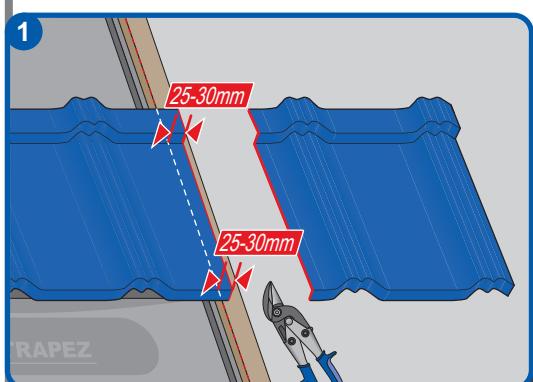


max 80mm


7c

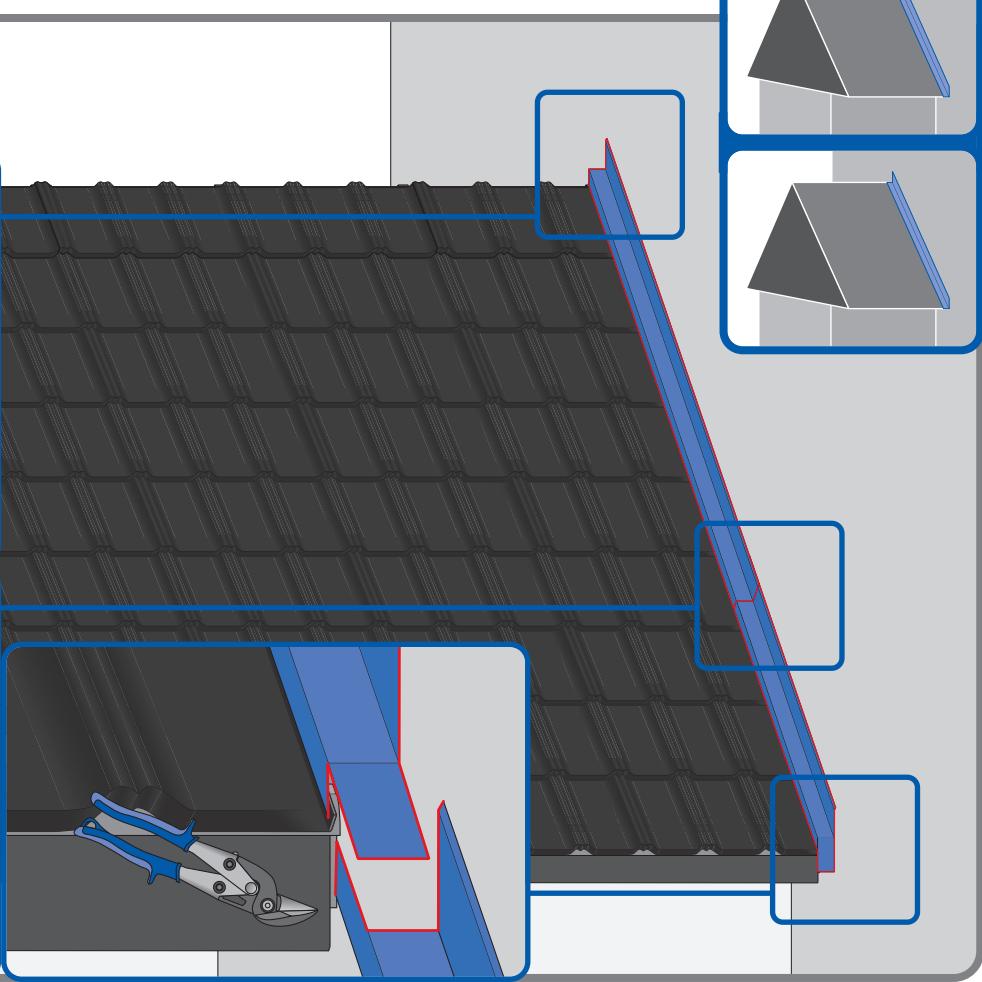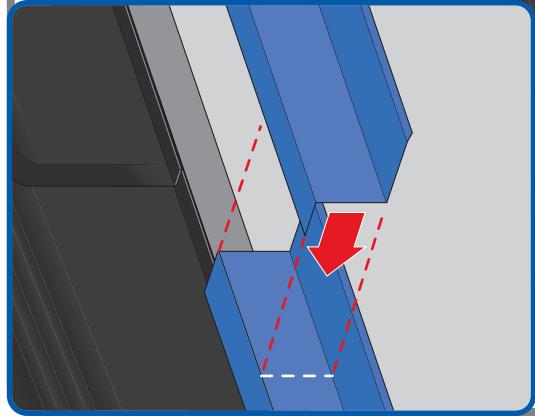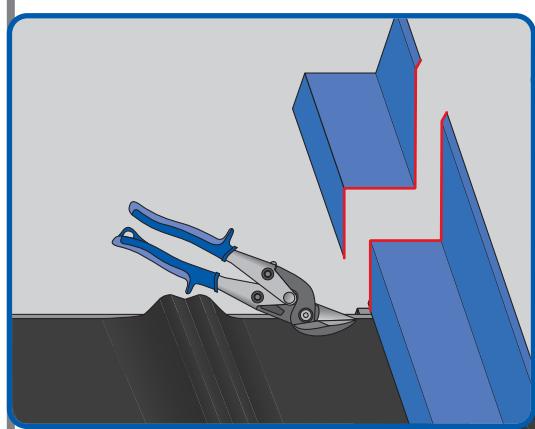


7d

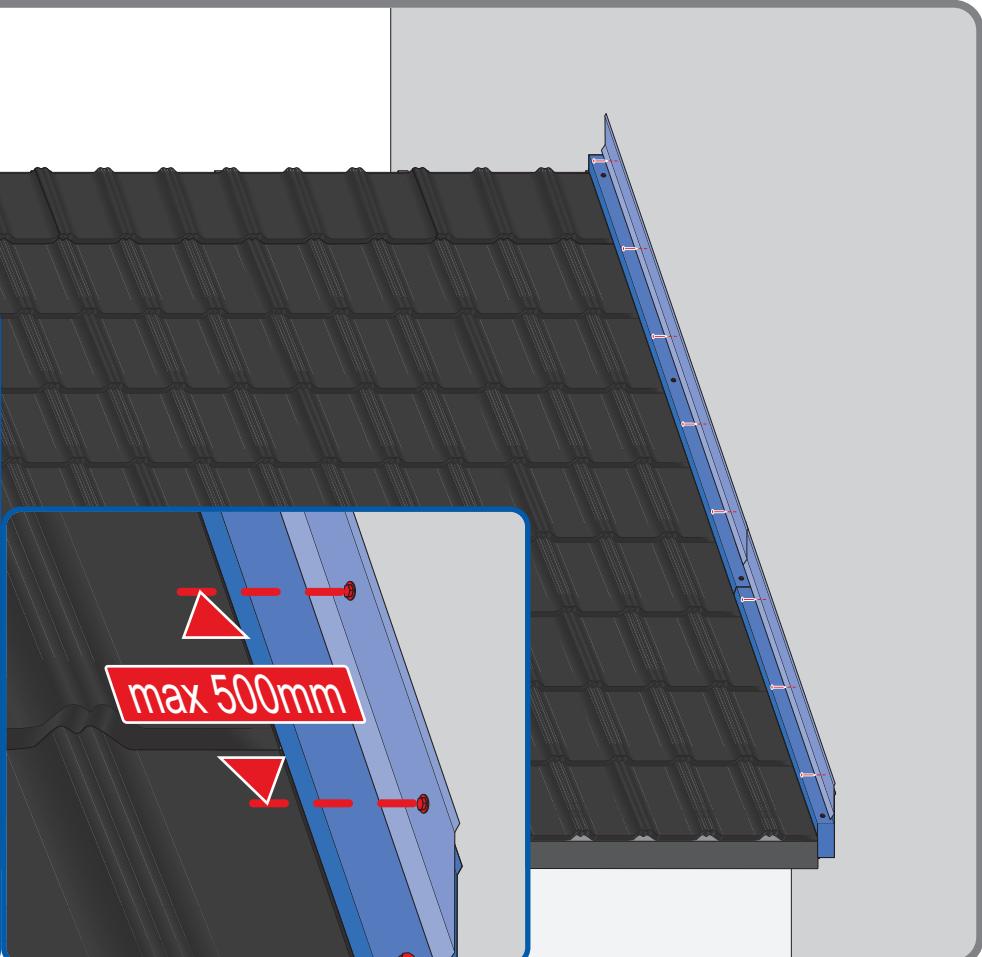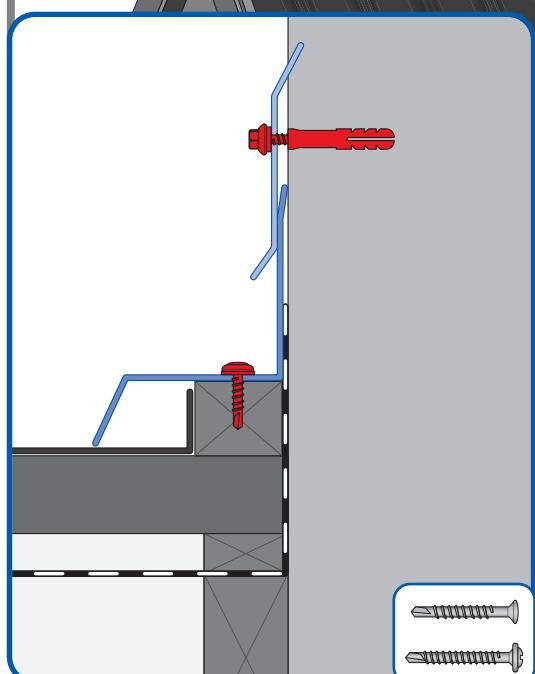



8a

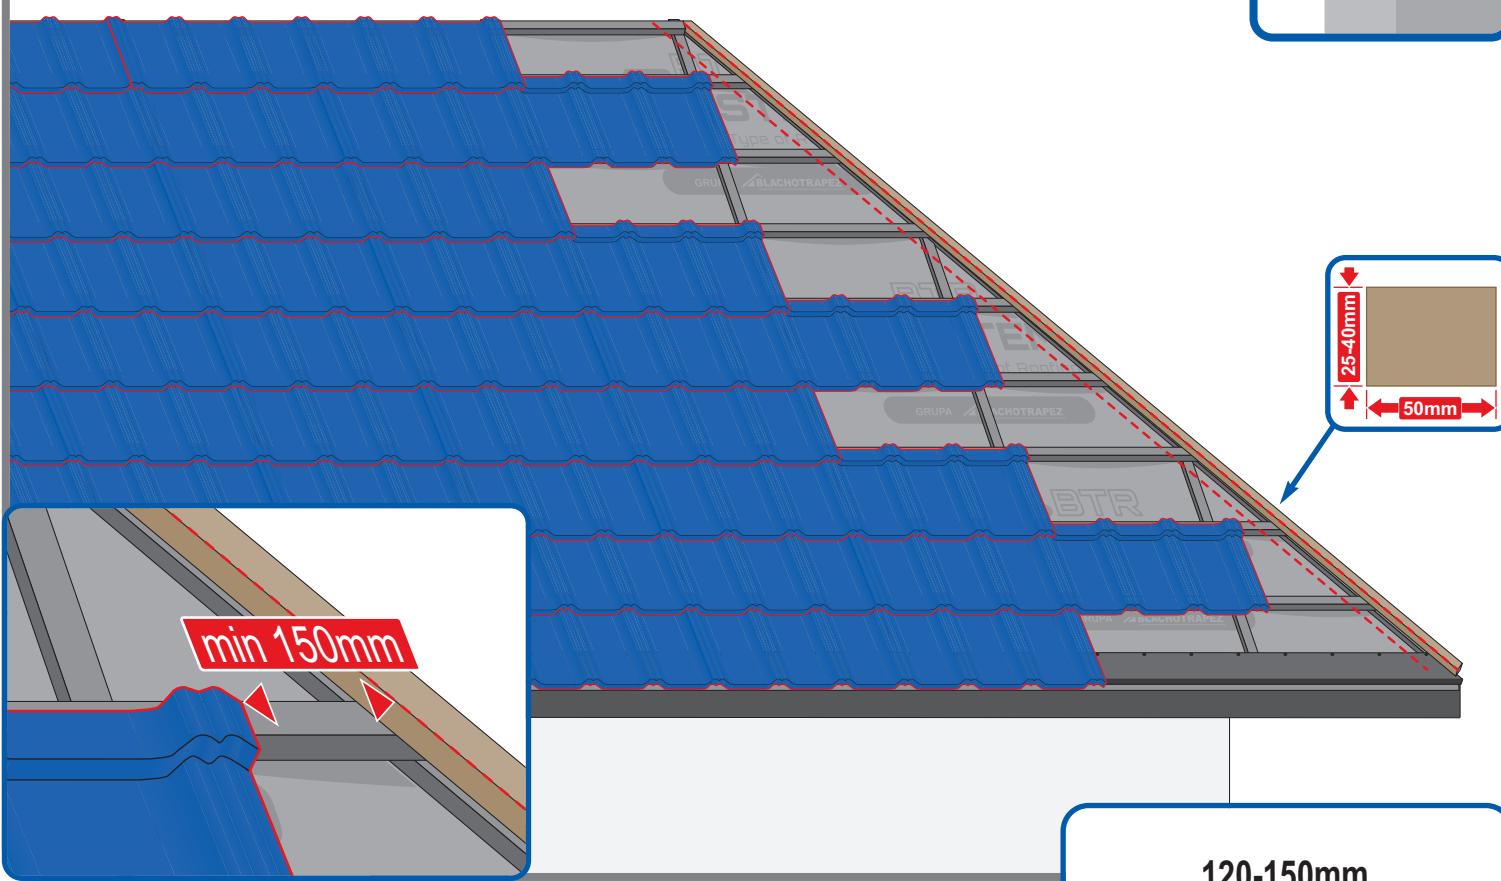


8b


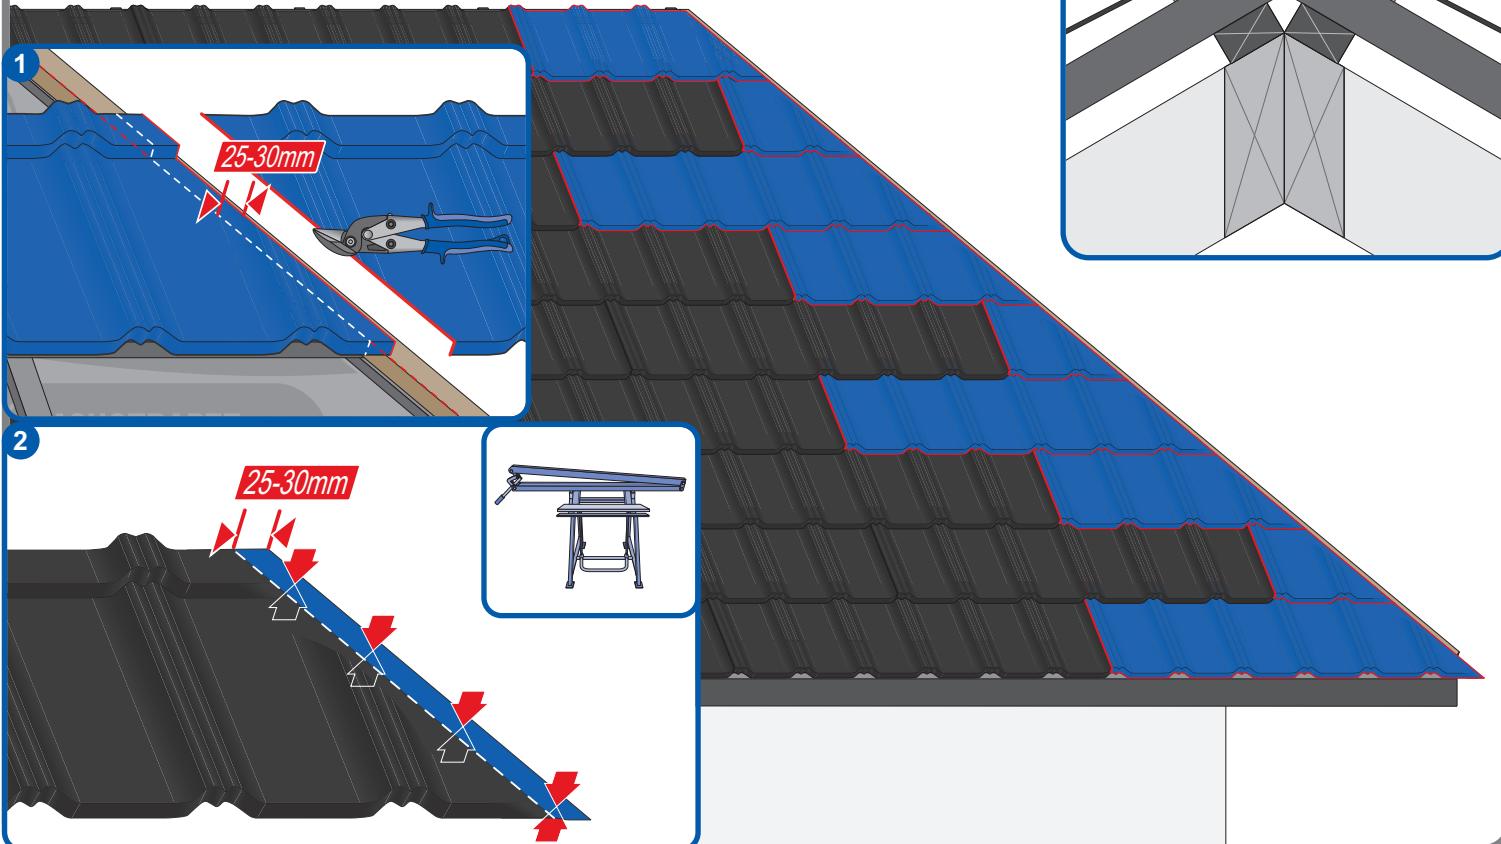


8c

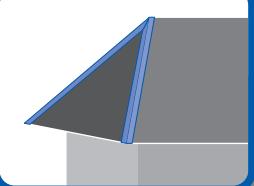
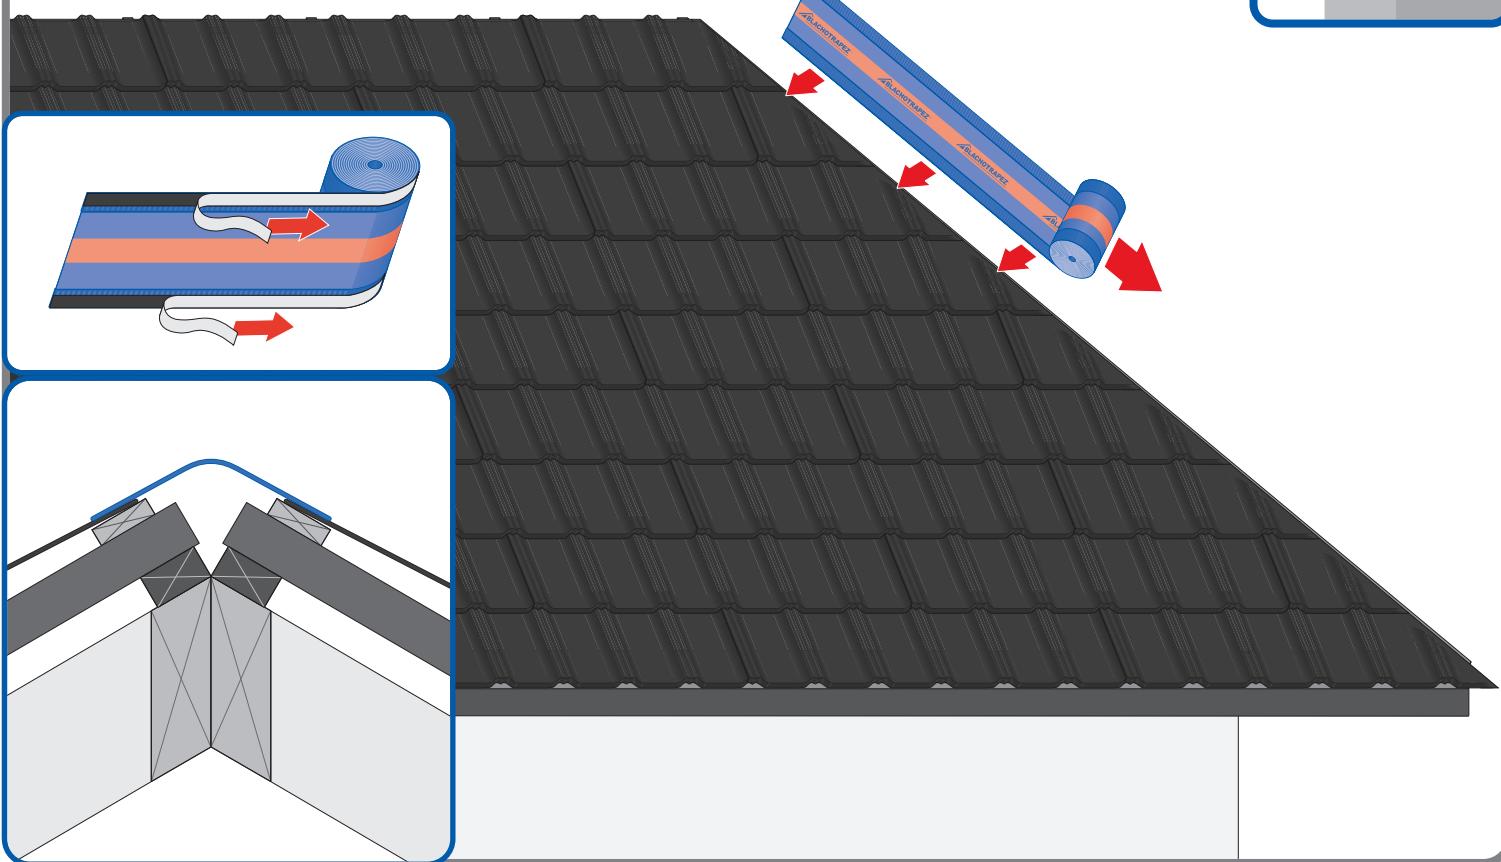


8d


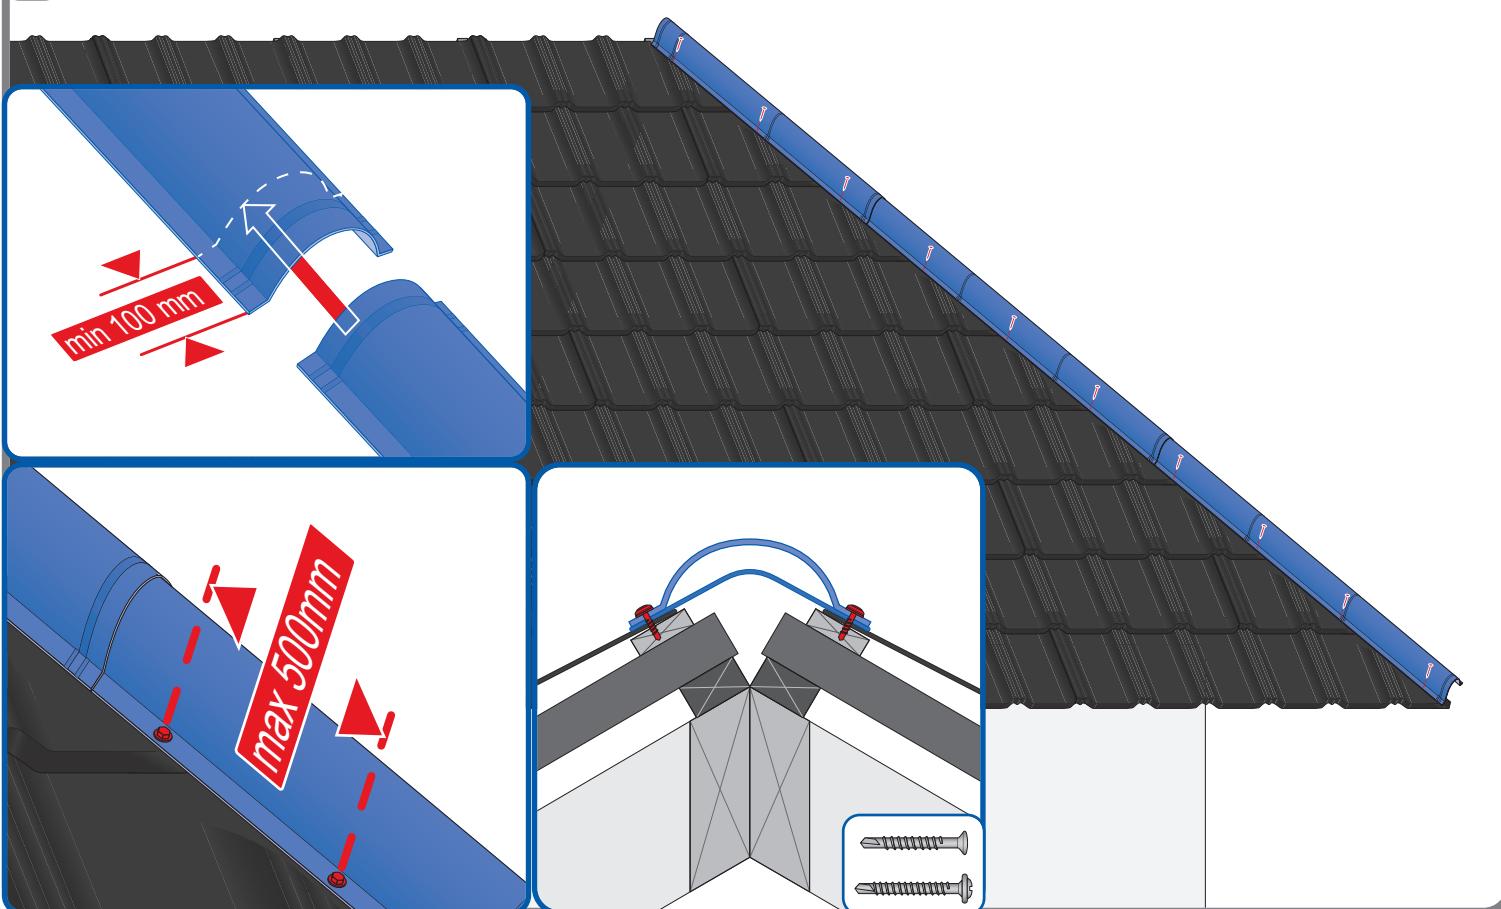


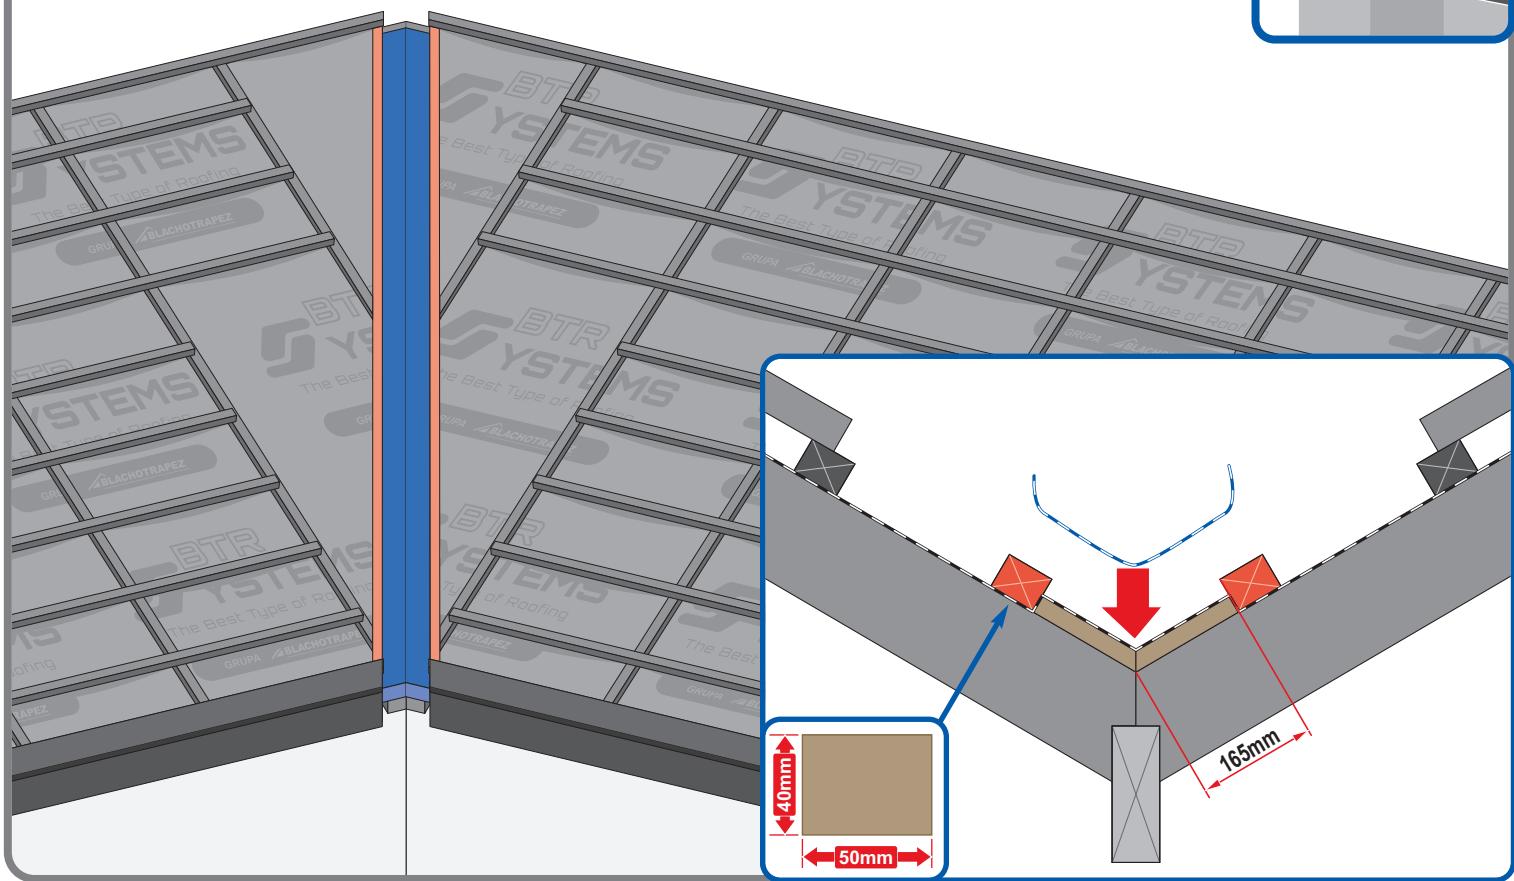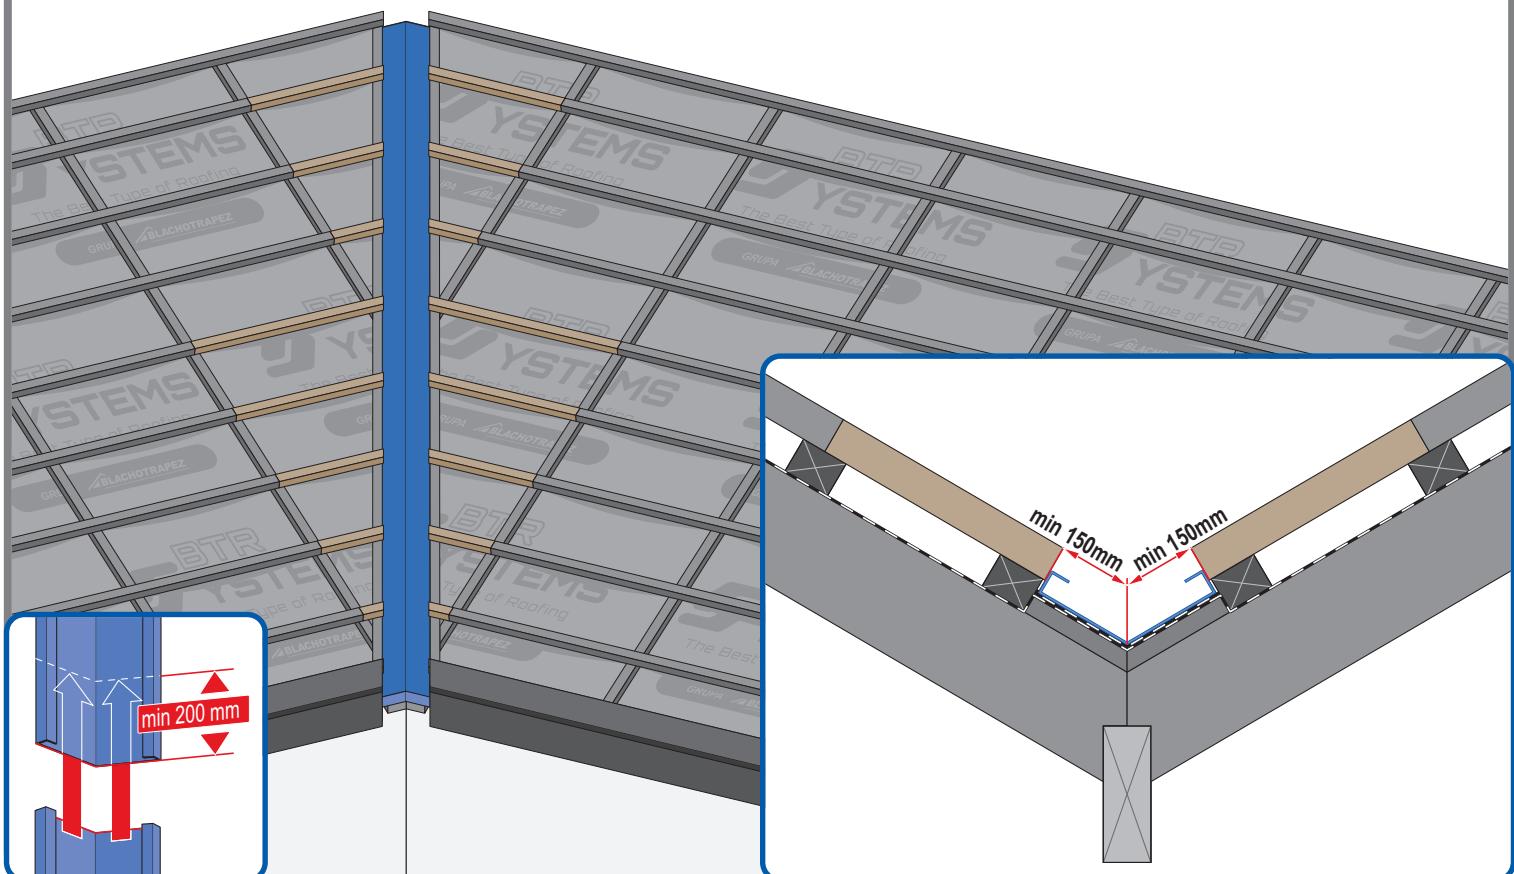**9a****9b**



9c

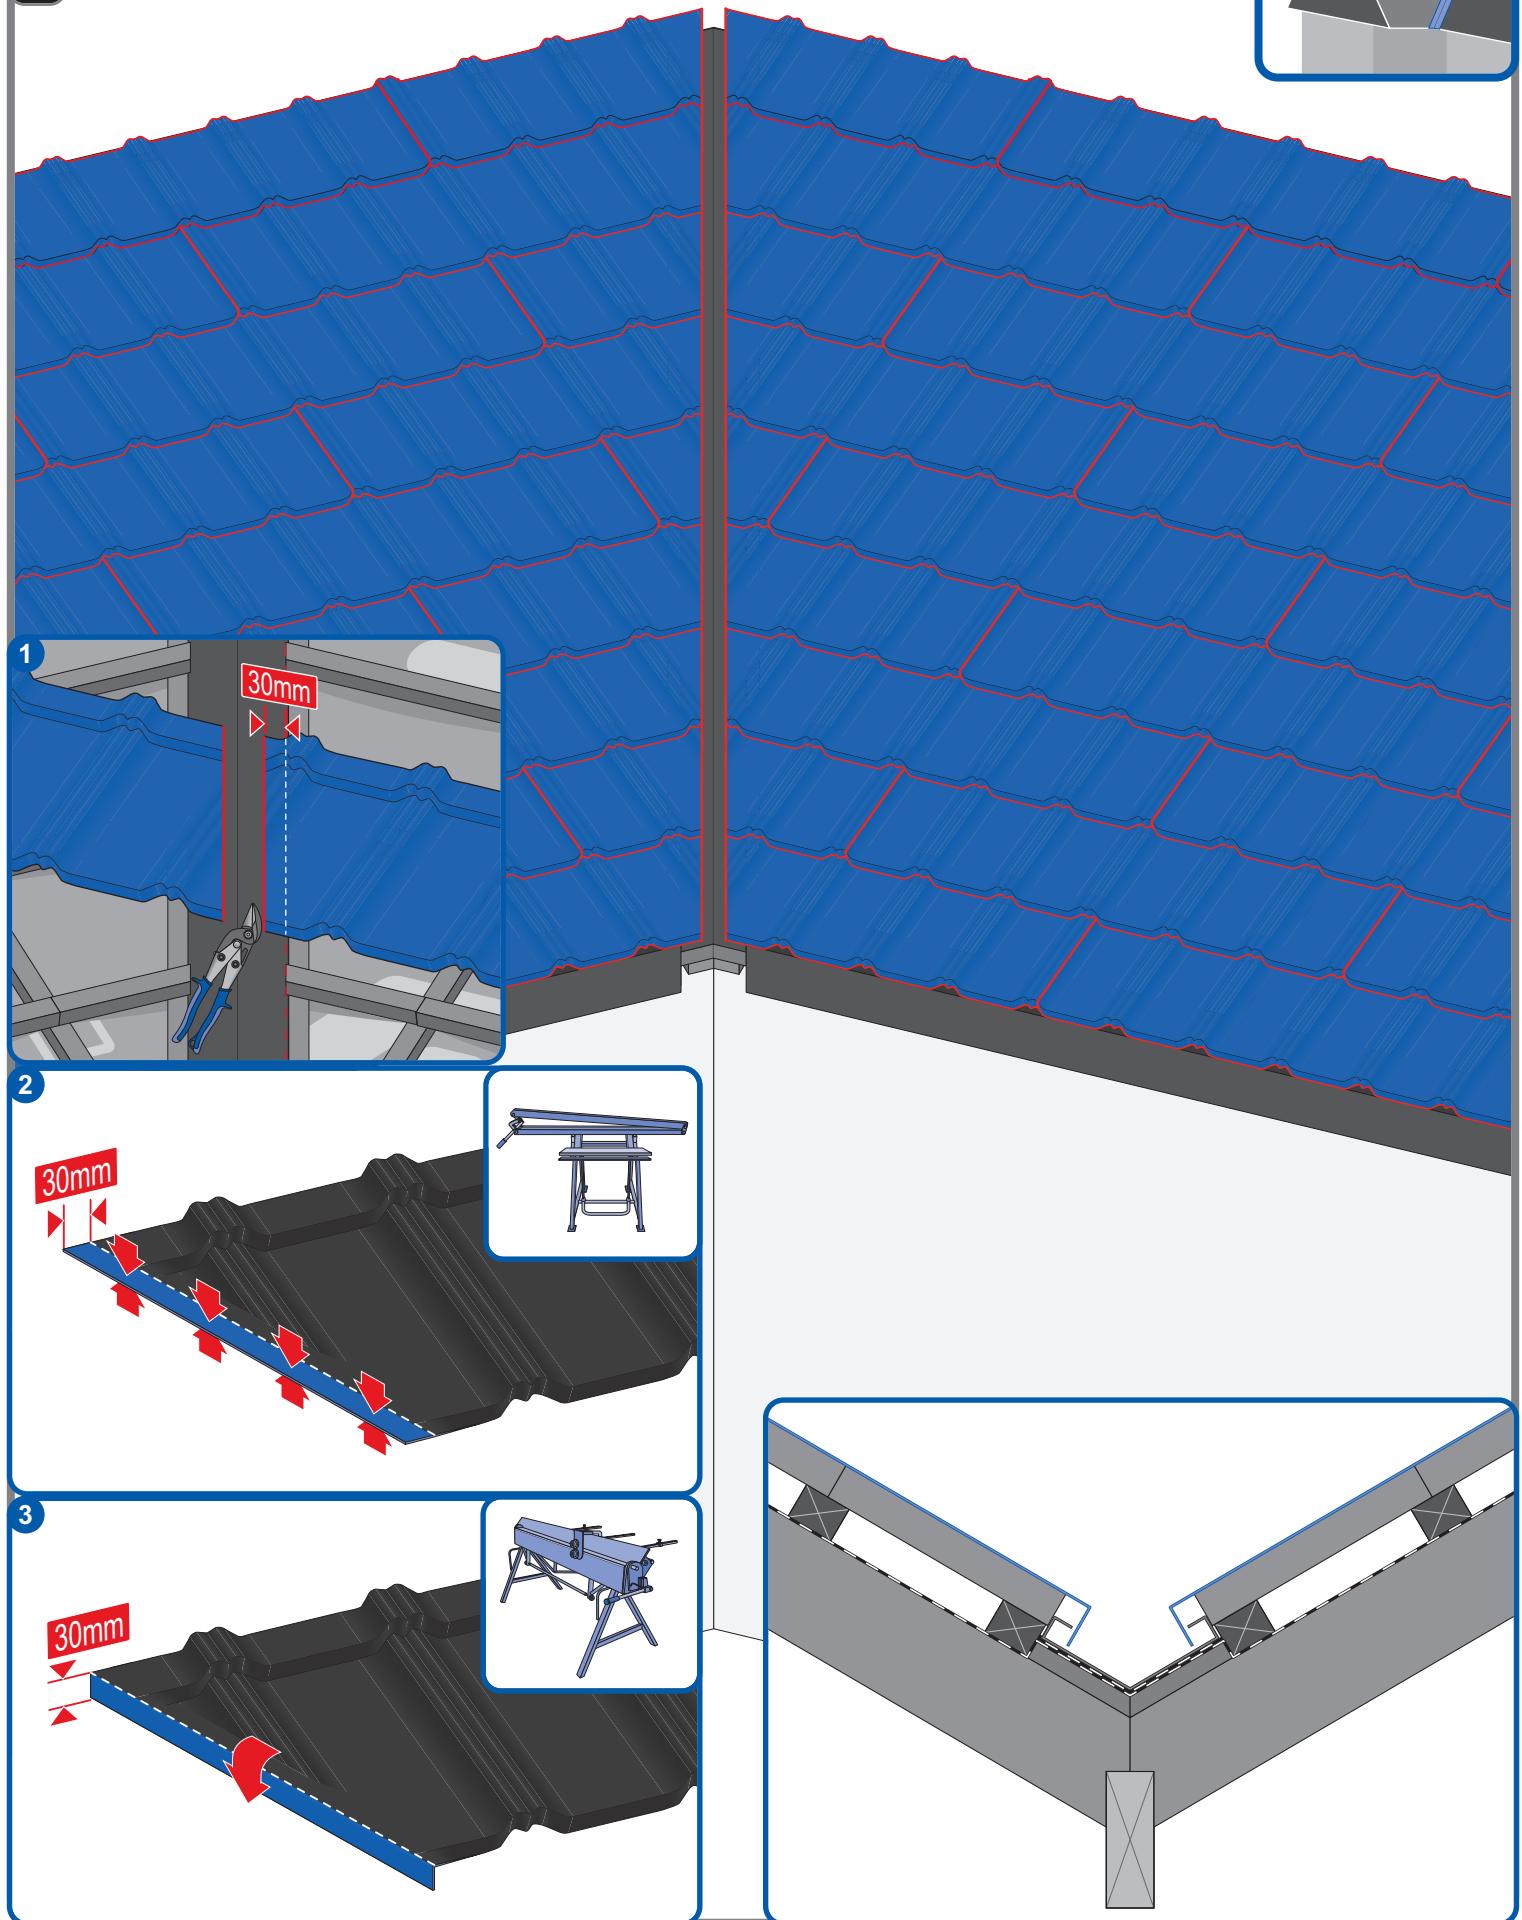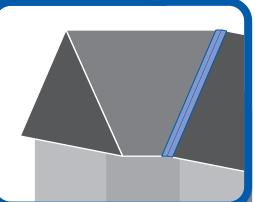



10a



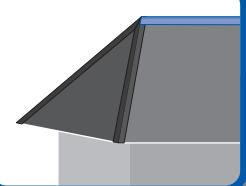
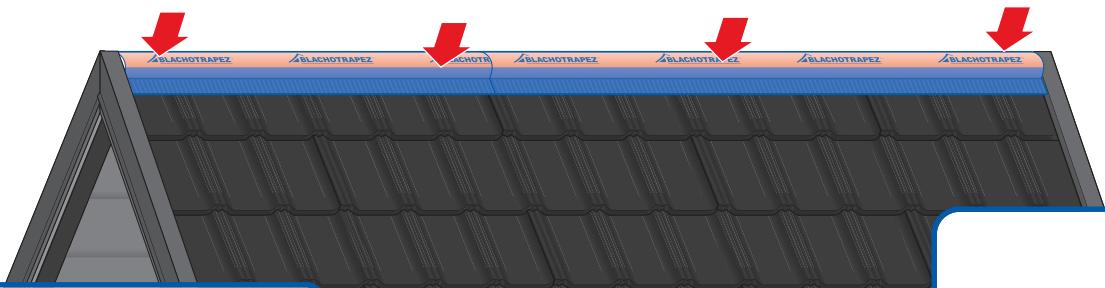




10b

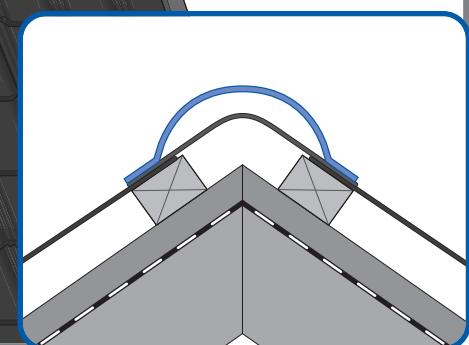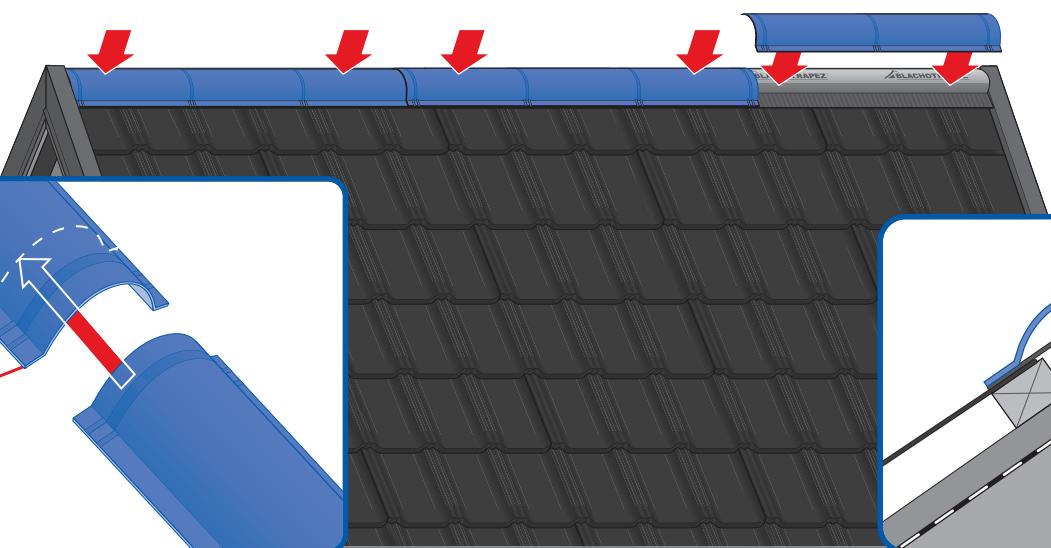

10c

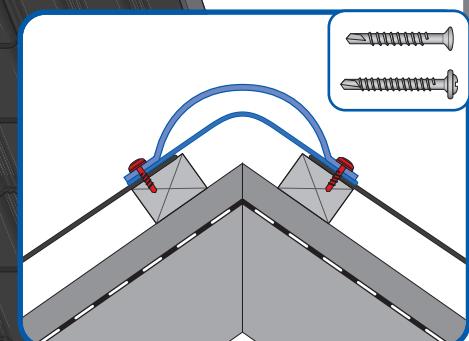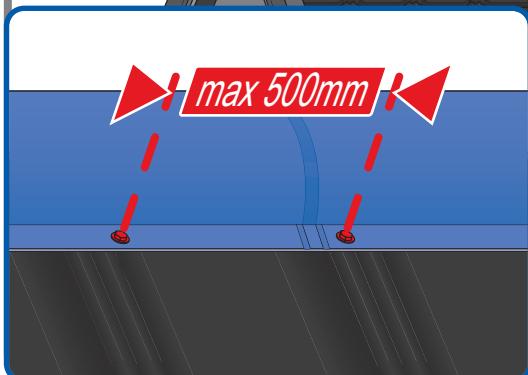

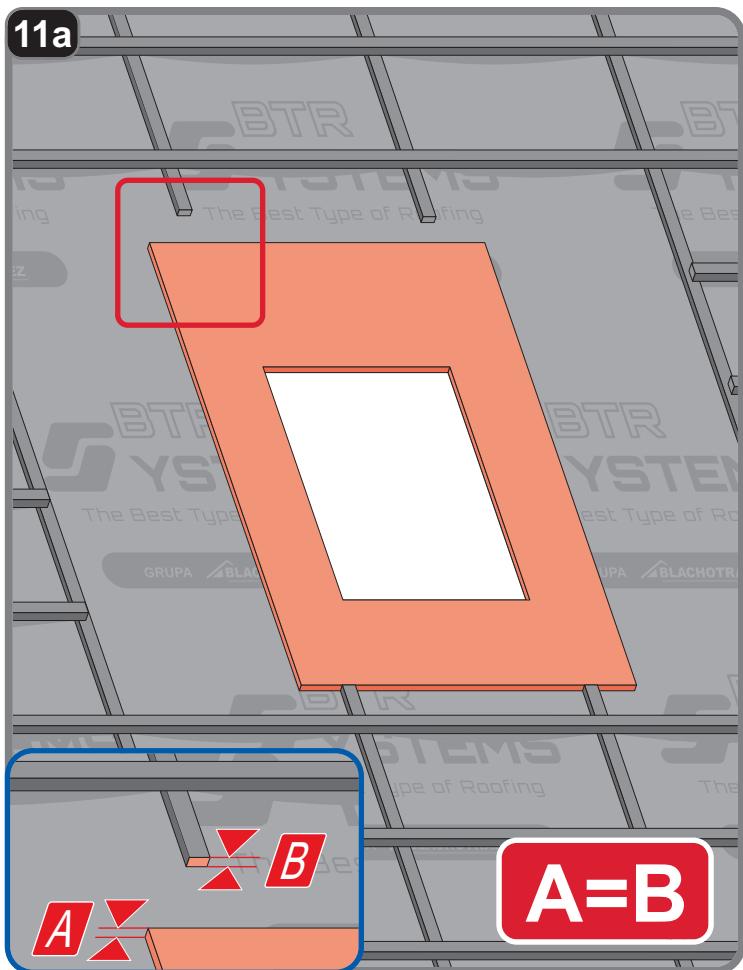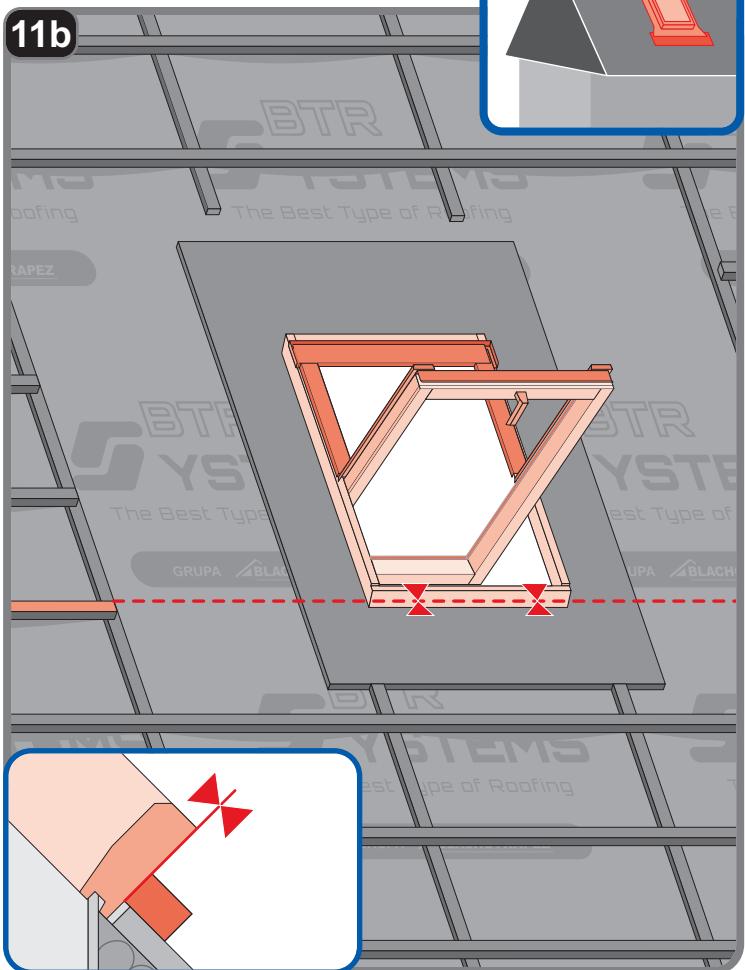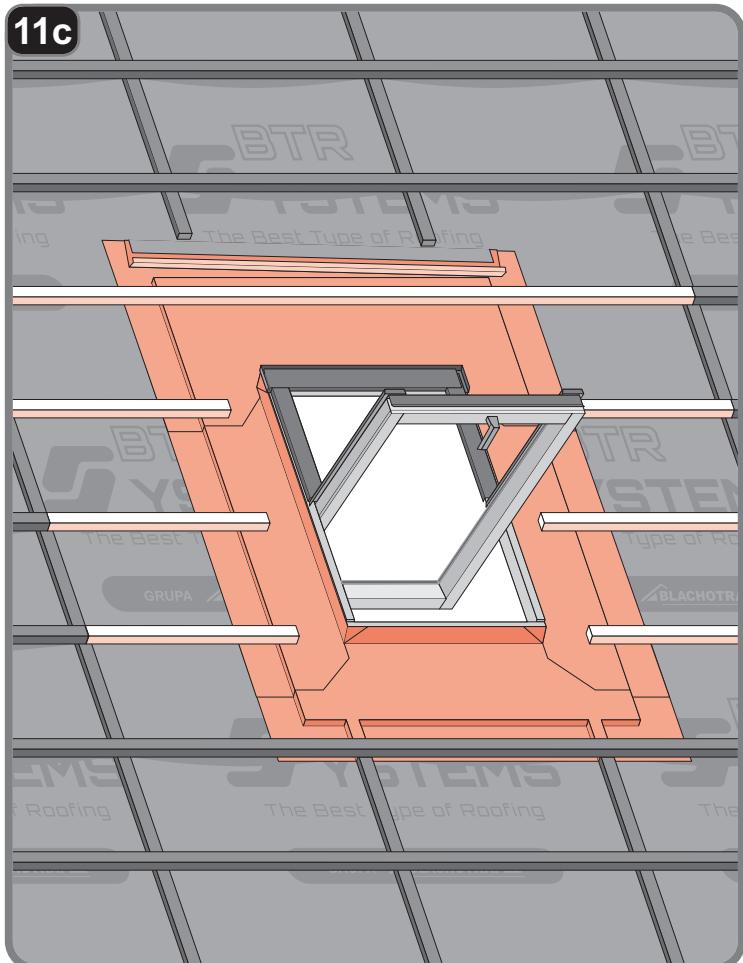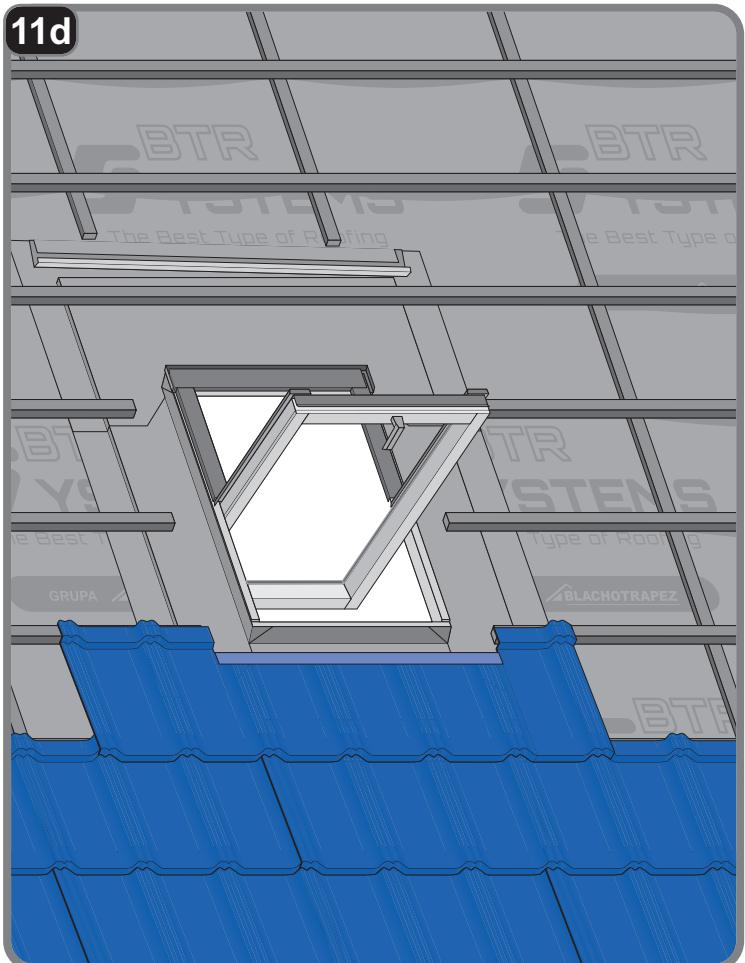**11a****11b****11c****11d**

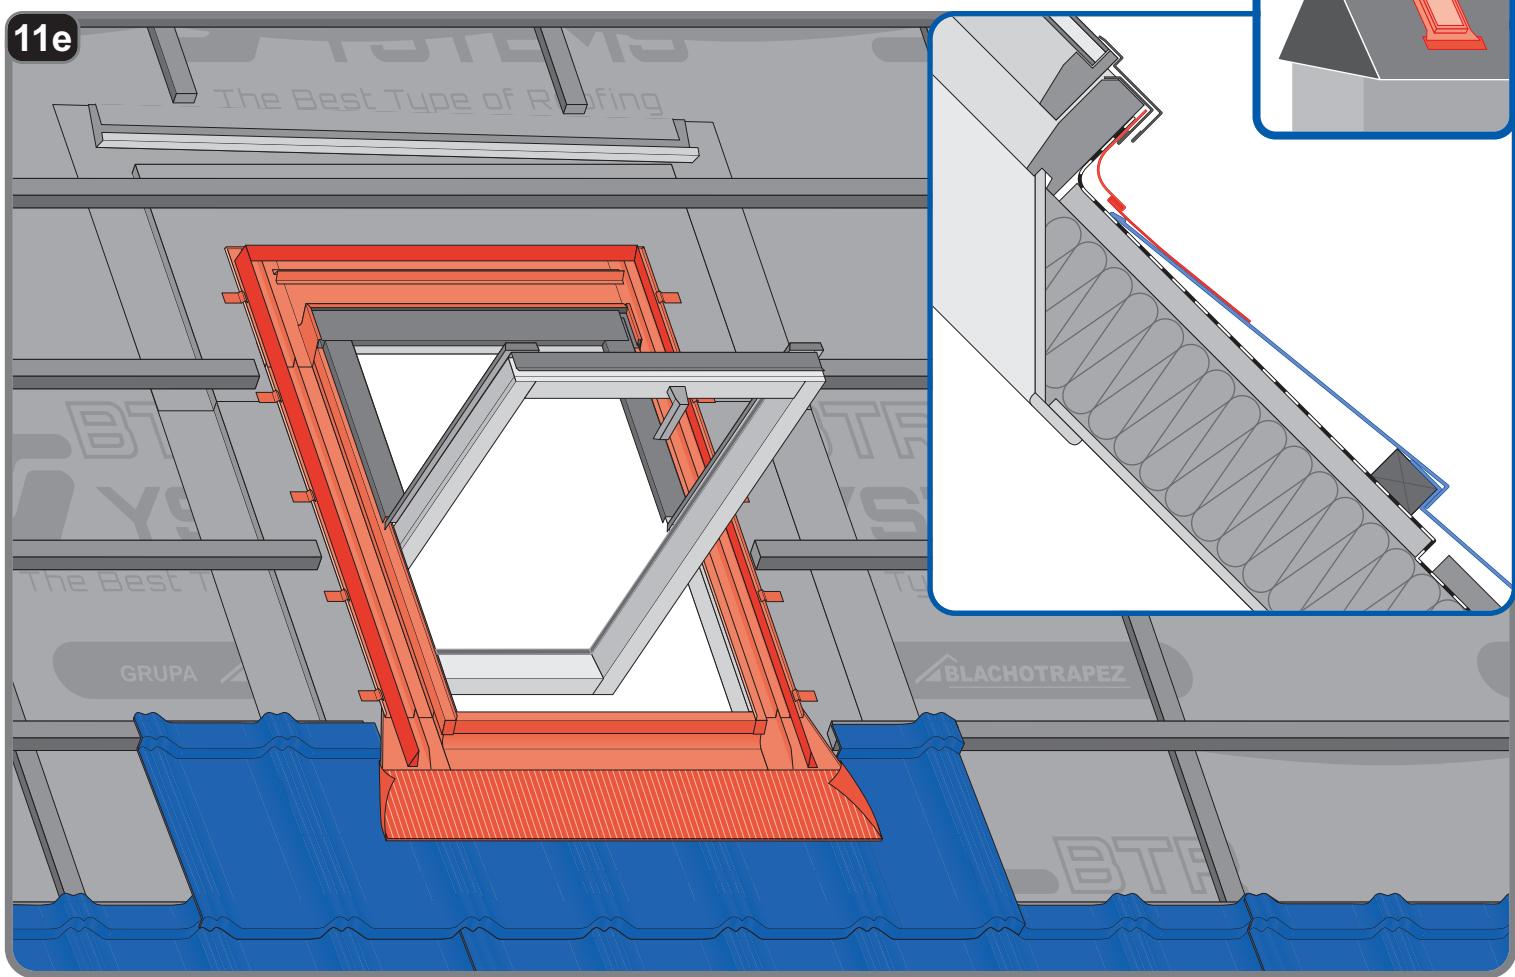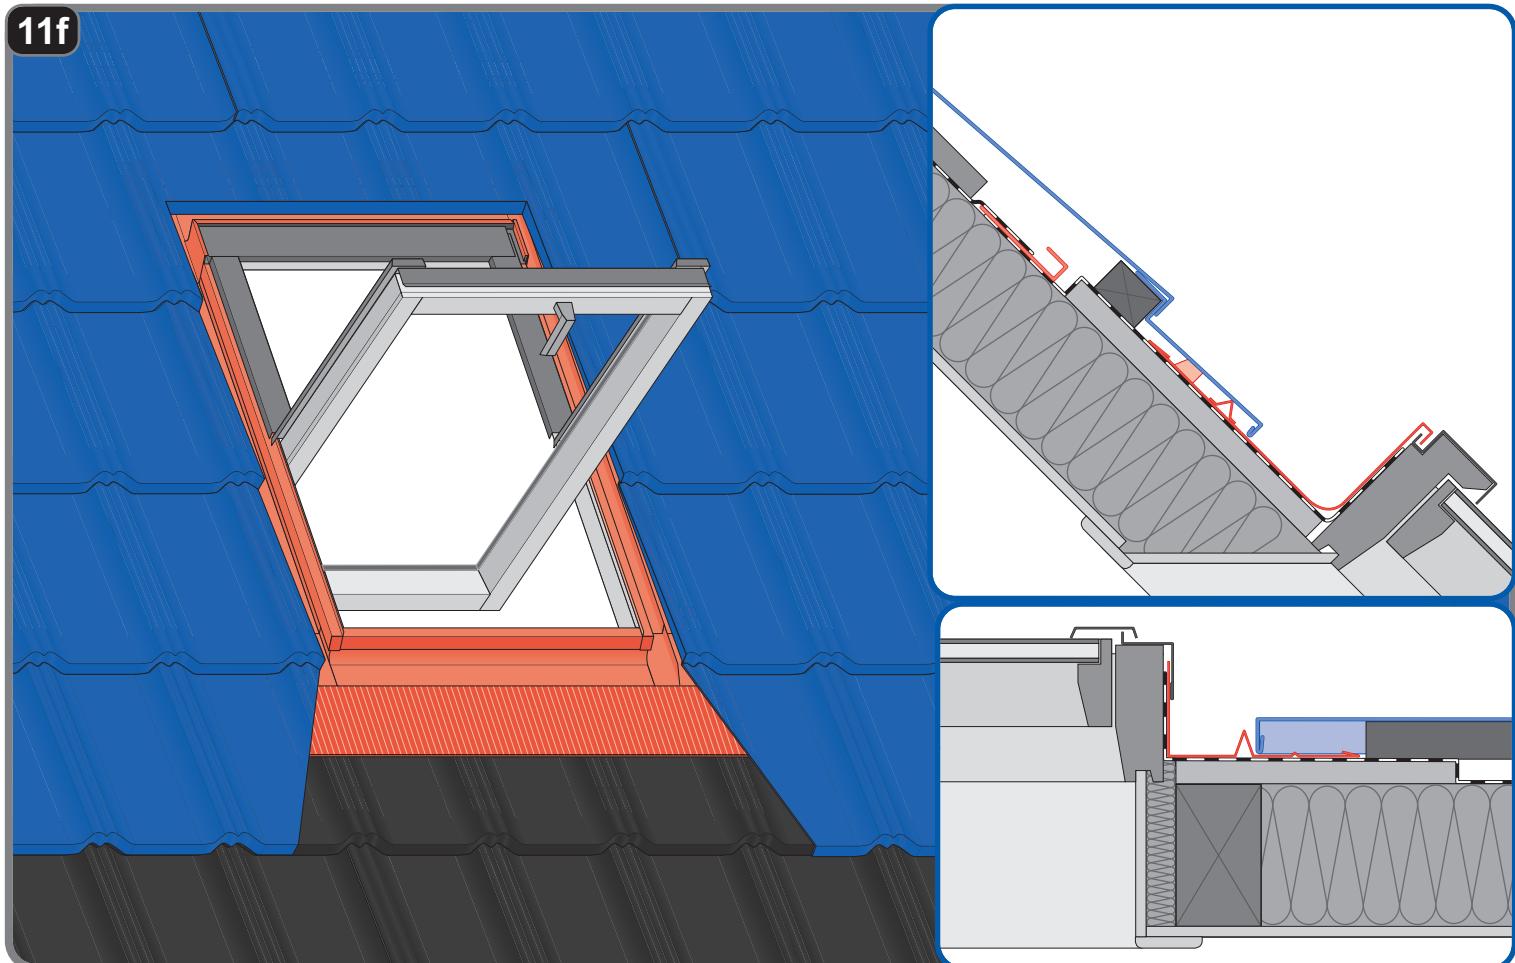**11e****11f**





GRUPA BLACHOTRAPEZ

1223

Installation of roofing sheets requires specialist knowledge and experience. This manual is a reference material and does not absolve liability contractors from the obligation to comply with the rules of the roofing industry and standards. The assembly methods presented in this manual are indicative general. The installation method required may differ from the one indicated in the manual depending on the type of roof or regional solutions. To take advantage of general instructions and assembly instructions, follow the designer's guidelines or contact our technical support department. Experienced contractors have individual solutions that BTR Systems accepts.